

Control Valve

Model BZL

Model BZT

Model BZX

Model JZG

Model BZS




Directly-Attached Speed Control Valve, Air Bleed Valve, G-Thread Plug and Sequence Valve

• Directly Attached to Clamps

Control Valves :

Speed control valve, air bleed valve, G-thread plug and sequence valve attached directly into Kosmek hydraulic clamp G-thread piping option.

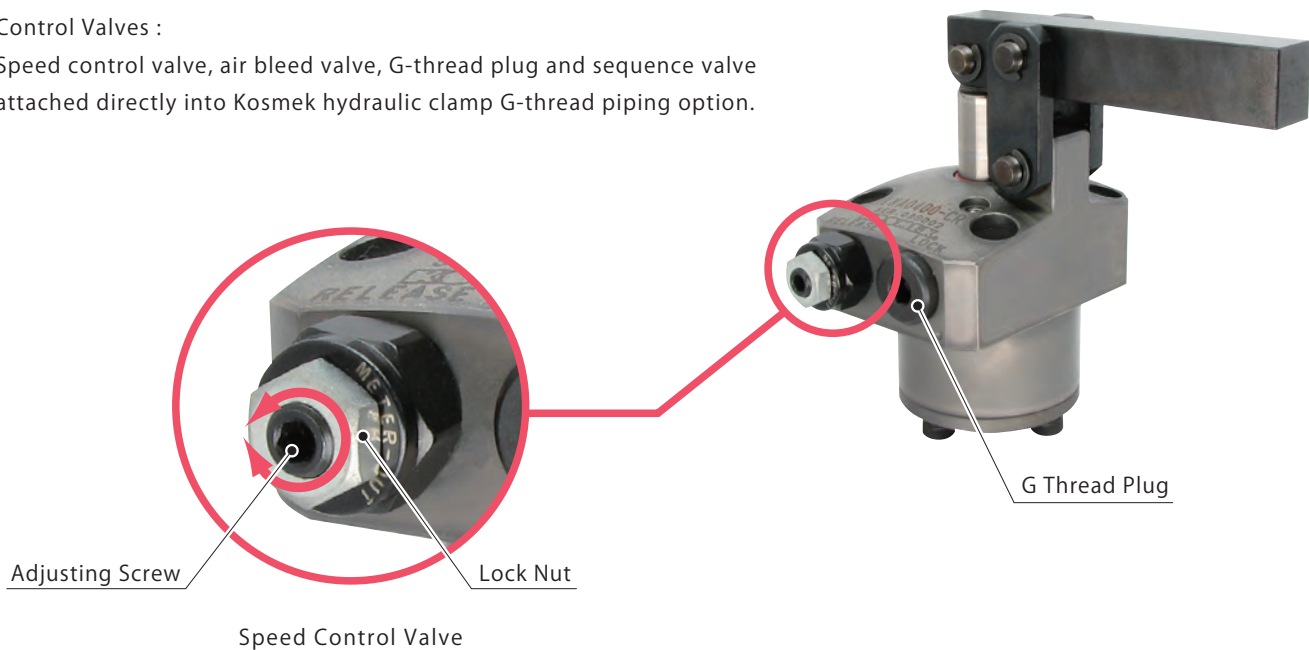

Speed Control Valve

Model BZL
Model BZT



Air Bleed Valve

Model BZX








G Thread Plug

Model JZG



Direct-Mount Sequence Valve

Model BZS

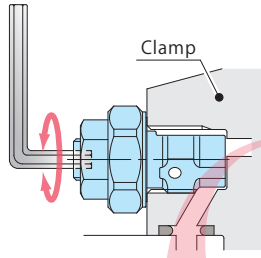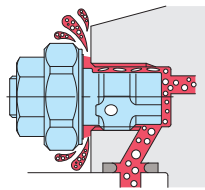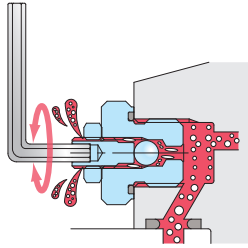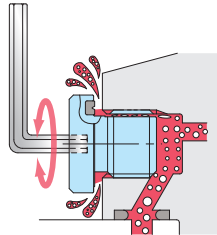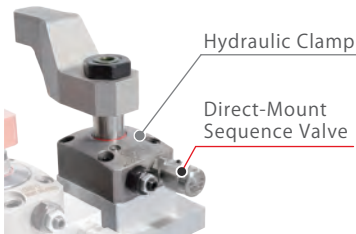	Operating Pressure Range	Action Description
Speed Control Valve (For Low Pressure) Model BZL → P.949	7MPa or less	Adjust the flow rate with a wrench. Able to adjust the clamping speed individually. 
Speed Control Valve (For High Pressure) Model BZT → P.953	35MPa or less	Air bleeding in the circuit is possible by loosening the speed control valve. 
Air Bleed Valve Model BZX → P.955	35MPa or less	Air bleeding in the circuit is possible by wrench. 
G Thread Plug Model JZG → P.957	35MPa or less	Air bleeding in the circuit is possible by loosening the G thread plug. 
Direct-Mount Sequence Valve Model BZS → P.959	7MPa or less	Sequence Valve directly attaches to KOSMEK hydraulic clamp's G-thread piping option. Controls the operating sequence of each actuator. 

High-Power Series

Pneumatic Series

Hydraulic Series

Valve / Coupler Hydraulic Unit

Manual Operation Accessories

Cautions / Others

Hole Clamp

SFA
SFC

Swing Clamp

LHA
LHC
LHS
LHW
LG/LT
TLA-2
TLB-2
TLA-1

Link Clamp

LKA
LKC
LKW
LJ/LM
TMA-2
TMA-1

Work Support

LD
LC
TNC
TC

Air Sensing Lift Cylinder

LLW

Linear Cylinder / Compact Cylinder

LL
LLR
LLU
DP
DR
DS
DT

Block Cylinder

DBA/DBC

Centering Vise

FVA
FVD
FVC

Control Valve

BZL
BZT
BZX/JZG
BZS

Pallet Clamp

VS/VT

Expansion Locating Pin

VFL/VFM
VFJ/VFK

Pull Stud Clamp

FP
FQ

Customized Spring Cylinder

DWA/DWB

Model No. Indication (Speed Control Valve for Low Pressure)


BZL 0 10 1 - B

1
2
3



1 G Thread Size

- 10** : Thread Part G1/8A Thread
20 : Thread Part G1/4A Thread
30 : Thread Part G3/8A Thread





2 Design No.

- 1** : Revision Number

3 Control Method

- A** : Meter-in
B : Meter-out

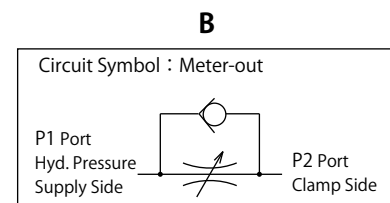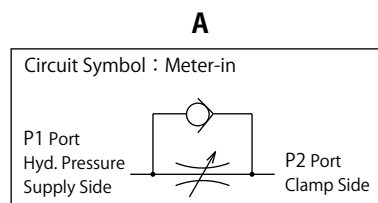

Specifications

Model No.	BZL0101-A	BZL0201-A	BZL0301-A	BZL0101-B	BZL0201-B	BZL0301-B
Max. Operating Pressure MPa	7					
Withstanding Pressure MPa	10.5					
Control Method	Meter-in			Meter-out		
G Thread Size	G1/8A	G1/4A	G3/8A	G1/8A	G1/4A	G3/8A
Cracking Pressure MPa	0.04			0.12		
Max. Passage Area mm ²	2.6	5.0	11.6	2.6	5.0	10.2
Usable Fluid	General Hydraulic Oil Equivalent to ISO-VG-32					
Operating Temperature °C	0 ~ 70					
Tightening Torque for Main Body N·m	10	25	35	10	25	35
Weight g	12	26	48	12	26	48

- Notes : 1. It must be mounted with recommended torque. Because of the structure of the metal seal, if mounting torque is insufficient, the flow control valve may not be able to adjust the flow rate.
2. Do not attach a used BZL to other clamps.
 Flow control will not be made because the bottom depth difference of G thread makes metal seal insufficient.

Applicable Products

Model No.	DBA (Double Action) Block Cylinder	DBC (Double Action) Block Cylinder	FVA (Double Action) Centering Vise	FVC (Double Action) Centering Vise	FVD (Double Action) Centering Vise	LC (Single Action) Work Support	LCW (Single Action) Work Support
BZL0101-A	(DBA0250-C□) (DBA0320-C□)	(DBC0250-C□) (DBC0320-C□)	(FVA0401) (FVA0631) (FVA1001)	(FVC0630)	(FVD1600) (FVD2500)	LC0263-C□-□ LC0303-C□□-□ LC0363-C□□-□ LC0403-C□□-□ LC0483-C□□-□ LC0553-C□□-□ LC0653-C□□-□	LCW0363-C□ LCW0403-C□ LCW0483-C□ LCW0553-C□ LCW0653-C□
BZL0101-B	DBA0250-C□ DBA0320-C□	DBC0250-C□ DBC0320-C□	FVA0401 FVA0631 FVA1001	FVC0630	FVD1600 FVD2500		
BZL0201-A	(DBA0400-C□) (DBA0500-C□)	(DBC0400-C□) (DBC0500-C□)		(FVC1000) (FVC1600)	(FVD4000)	LC0753-C□□-□ LC0903-C□□-□	
BZL0201-B	DBA0400-C□ DBA0500-C□	DBC0400-C□ DBC0500-C□		FVC1000 FVC1600	FVD4000		

Applicable Products

Model No.	LHA (Double Action) Swing Clamp	LHC (Double Action) Swing Clamp	LHD (Double Action) Swing Clamp	LHE (Double Action) High-Power Swing Clamp	LHS (Double Action) Swing Clamp	LHV (Double Action) Swing Clamp	LHW (Double Action) Swing Clamp	LT (Single Action) Swing Clamp	LG (Single Action) Swing Clamp
BZL0101-A	(LHA0360-C□□□)	(LHC0360-C□□□)	(LHD0400-C□□□)		(LHS0360-C□□□)	(LHV0400-C□□□)	(LHW0401-C□□□)	LT0301-C□□□	LG0301-C□□□
	(LHA0400-C□□□)	(LHC0400-C□□□)	(LHD0480-C□□□)		(LHS0400-C□□□)	(LHV0480-C□□□)	(LHW0481-C□□□)	LT0361-C□□□	LG0361-C□□□
	(LHA0480-C□□□)	(LHC0480-C□□□)	(LHD0550-C□□□)		(LHS0480-C□□□)	(LHV0550-C□□□)	(LHW0551-C□□□)	LT0401-C□□□	LG0401-C□□□
	(LHA0550-C□□□)	(LHC0550-C□□□)			(LHS0550-C□□□)			LT0481-C□□□	LG0481-C□□□
BZL0101-B	LHA0360-C□□□	LHC0360-C□□□	LHD0400-C□□□	LHE0300-C□	LHS0360-C□□□	LHV0400-C□□□	LHW0401-C□□□		
	LHA0400-C□□□	LHC0400-C□□□	LHD0480-C□□□	LHE0360-C□	LHS0400-C□□□	LHV0480-C□□□	LHW0481-C□□□		
	LHA0480-C□□□	LHC0480-C□□□	LHD0550-C□□□	LHE0400-C□	LHS0480-C□□□	LHV0550-C□□□	LHW0551-C□□□		
	LHA0550-C□□□	LHC0550-C□□□		LHE0480-C□	LHS0550-C□□□				
BZL0201-A	(LHA0650-C□□□)	(LHC0650-C□□□)			(LHS0650-C□□□)	(LHV0650-C□□□)	(LHW0651-C□□□)	LT0651-C□□□	LG0651-C□□□
	(LHA0750-C□□□)				(LHS0750-C□□□)	(LHV0750-C□□□)	(LHW0751-C□□□)	LT0751-C□□□	LG0751-C□□□
BZL0201-B	LHA0650-C□□□	LHC0650-C□□□			LHS0650-C□□□	LHV0650-C□□□	LHW0651-C□□□		
	LHA0750-C□□□				LHS0750-C□□□	LHV0750-C□□□	LHW0751-C□□□		
BZL0301-A	(LHA0900-C□□□)				(LHS0900-C□□□)				LG0901-C□□□
	(LHA1050-C□□□)				(LHS1050-C□□□)				LG1051-C□□□
BZL0301-B	LHA0900-C□□□				LHS0900-C□□□				
	LHA1050-C□□□				LHS1050-C□□□				

Model No.	LGV (Single Action) Swing Clamp	LKA (Double Action) Link Clamp	LKC (Double Action) Link Clamp	LKE (Double Action) High-Power Link Clamp	LKK (Double Action) Universal Clamp	LKV (Double Action) Link Clamp	LKW (Double Action) Link Clamp	LM (Single Action) Link Clamp	LJ (Single Action) Link Clamp
BZL0101-A	LGV0400-C□□□	(LKA0360-C□□□)	(LKC0400-C□□□)	LKE0300-C□	(LKK0360-C□□)	(LKV0400-C□□□)	(LKW0401-C□□□)	LM0300-C□	LJ0302-C□
	LGV0480-C□□□	(LKA0400-C□□□)	(LKC0480-C□□□)	LKE0360-C□	(LKK0400-C□□)	(LKV0480-C□□□)	(LKW0481-C□□□)	LM0360-C□	LJ0362-C□
	LGV0550-C□□□	(LKA0480-C□□□)	(LKC0550-C□□□)	LKE0400-C□	(LKK0480-C□□)	(LKV0550-C□□□)	(LKW0551-C□□□)	LM0400-C□	LJ0402-C□
		(LKA0550-C□□□)		LKE0480-C□	(LKK0550-C□□)			LM0480-C□	LJ0482-C□
BZL0101-B		LKA0360-C□□□	LKC0400-C□□□		LKK0360-C□	LKV0400-C□□□	LKW0401-C□□□		
		LKA0400-C□□□	LKC0480-C□□□		LKK0400-C□	LKV0480-C□□□	LKW0481-C□□□		
		LKA0480-C□□□	LKC0550-C□□□		LKK0480-C□	LKV0550-C□□□	LKW0551-C□□□		
		LKA0550-C□□□			LKK0550-C□				
BZL0201-A	LGV0650-C□□□	(LKA0650-C□□□)	(LKC0650-C□□□)		(LKK0650-C□□)	(LKV0650-C□□□)	(LKW0651-C□□□)	LM0650-C□	LJ0652-C□
	LGV0750-C□□□	(LKA0750-C□□□)			(LKK0750-C□□)	(LKV0750-C□□□)	(LKW0751-C□□□)	LM0750-C□	LJ0752-C□
BZL0201-B		LKA0650-C□□□	LKC0650-C□□□		LKK0650-C□	LKV0650-C□□□	LKW0651-C□□□		
		LKA0750-C□□□				LKV0750-C□□□	LKW0751-C□□□		
BZL0301-A		(LKA0900-C□□□)							LJ0902-C□
		(LKA1050-C□□□)							LJ1052-C□
BZL0301-B		LKA0900-C□□□							
		LKA1050-C□□□							

Model No.	LJV (Single Action) Link Clamp	LFW (Double Action) Link Clamp	LFA (Double Action) Link Clamp	LSA (Double Action) Side Clamp	LSE (Double Action) High-Power Side Clamp	LL (Double Action) Linear Cylinder	LLR (Double Action) Linear Cylinder	LLV (Double Action) Lift Cylinder	LLW (Double Action) Lift Cylinder
BZL0101-A	LJV0400-C□□□	(LFW0480-C□□)	(LFA0480-C□□)	(LSA0360-C□□)	LSE0360-C□	(LL0360-C□□□)	(LLR0360-C□□□)	(LLV0360-C□□□)	(LLW0361-C□□□)
	LJV0480-C□□□	(LFW0550-C□□)	(LFA0550-C□□)			(LL0400-C□□□)	(LLR0400-C□□□)	(LLV0400-C□□□)	(LLW0401-C□□□)
	LJV0550-C□□□					(LL0480-C□□□)	(LLR0480-C□□□)	(LLV0480-C□□□)	(LLW0481-C□□□)
						(LL0550-C□□□)	(LLR0550-C□□□)		
BZL0101-B		LFW0480-C□□	LFA0480-C□□	LSA0360-C□□		LL0360-C□□□	LLR0360-C□□□	LLV0360-C□□□	LLW0361-C□□□
		LFW0550-C□□	LFA0550-C□□			LL0400-C□□□	LLR0400-C□□□	LLV0400-C□□□	LLW0401-C□□□
						LL0480-C□□□	LLR0480-C□□□	LLV0480-C□□□	LLW0481-C□□□
						LL0550-C□□□	LLR0550-C□□□		
BZL0201-A	LJV0650-C□□□	(LFW0650-C□□)	(LFA0650-C□□)			(LL0650-C□□□)	(LLR0650-C□□□)		
	LJV0750-C□□□	(LFW0750-C□□)	(LFA0750-C□□)			(LL0750-C□□□)	(LLR0750-C□□□)		
BZL0201-B		LFW0650-C□□	LFA0650-C□□			LL0650-C□□□	LLR0650-C□□□		
		LFW0750-C□□	LFA0750-C□□			LL0750-C□□□	LLR0750-C□□□		
BZL0301-A						(LL0900-C□□□)	(LLR0900-C□□□)		
						(LL1050-C□□□)	(LLR1050-C□□□)		
BZL0301-B						LL0900-C□□□	LLR0900-C□□□		
						LL1050-C□□□	LLR1050-C□□□		

Note : 1. Flow control circuit for double acting cylinder should have meter-out circuits for both the lock and release sides (except model LKE/LSE). Meter-in circuits can be adversely affected by any air in the system.

High-Power Series
Pneumatic Series
Hydraulic Series
Valve / Coupler Hydraulic Unit
Manual Operation Accessories
Cautions / Others

Hole Clamp

SFA
SFC

Swing Clamp

LHA
LHC
LHS
LHW
LG/LT
TLA-2
TLB-2
TLA-1

Link Clamp

LKA
LKC
LKW
LJ/LM
TMA-2
TMA-1

Work Support

LD
LC
TNC
TC

Air Sensing Lift Cylinder

LLW

Linear Cylinder / Compact Cylinder

LL
LLR
LLU
DP
DR
DS
DT

Block Cylinder

DBA/DBC

Centering Vise

FVA
FVD
FVC

Control Valve

BZL
BZT
BZX/JZG
BZS

Pallet Clamp

VS/VT

Expansion Locating Pin

VFL/VFM
VFJ/VFK







Pull Stud Clamp

FP
FQ


Customized Spring Cylinder

DWA/DWB


● Flow Rate Graph < Hydraulic Fluids ISO-VG32 (25~35°C) >

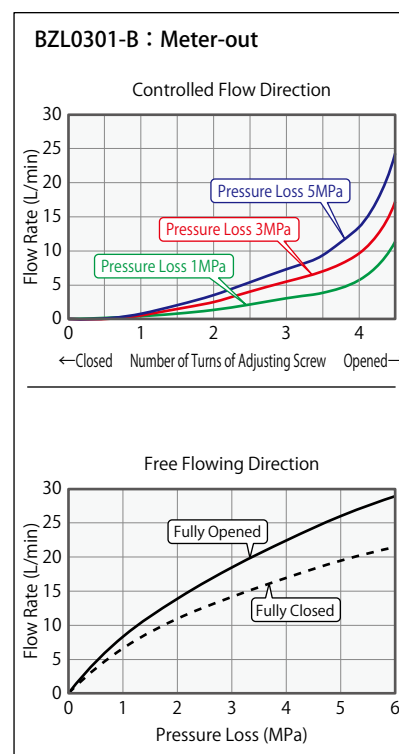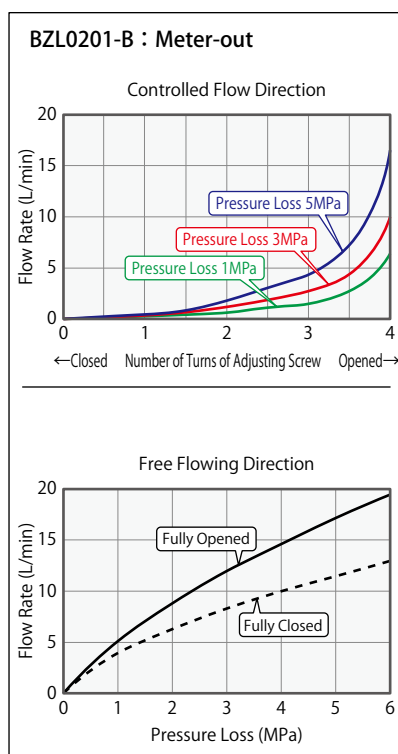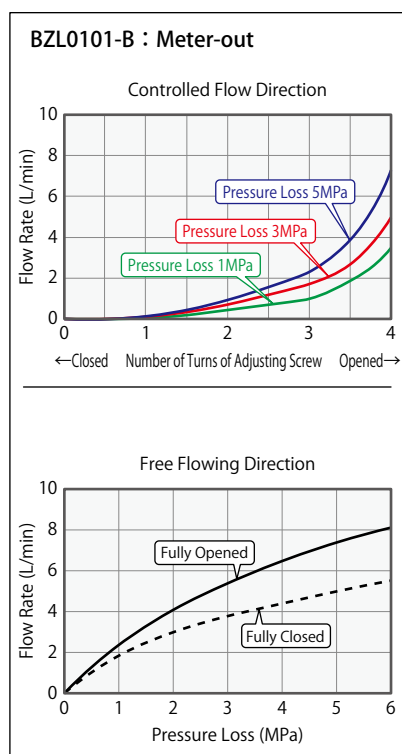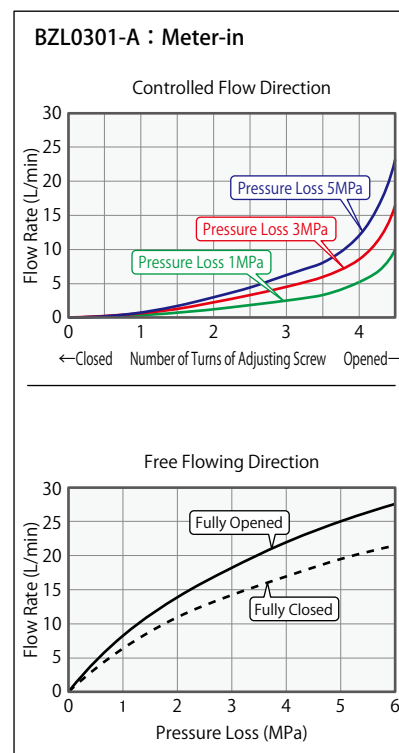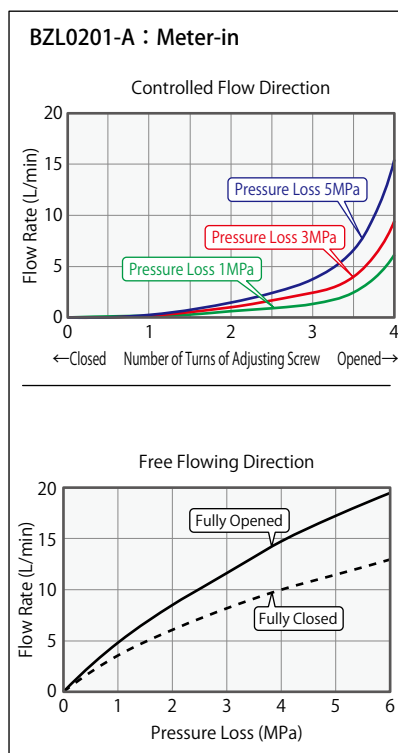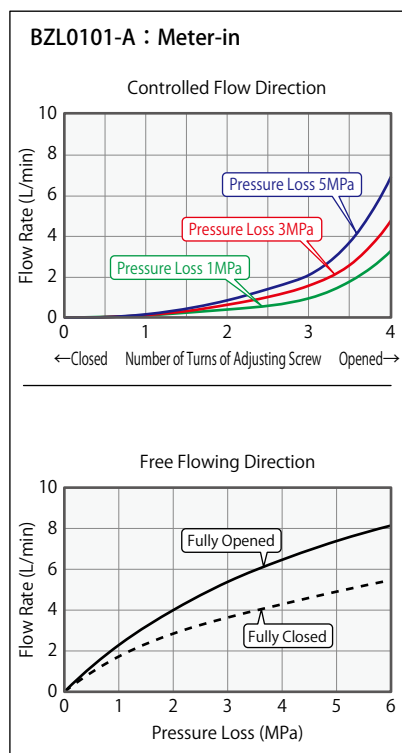

External Dimensions

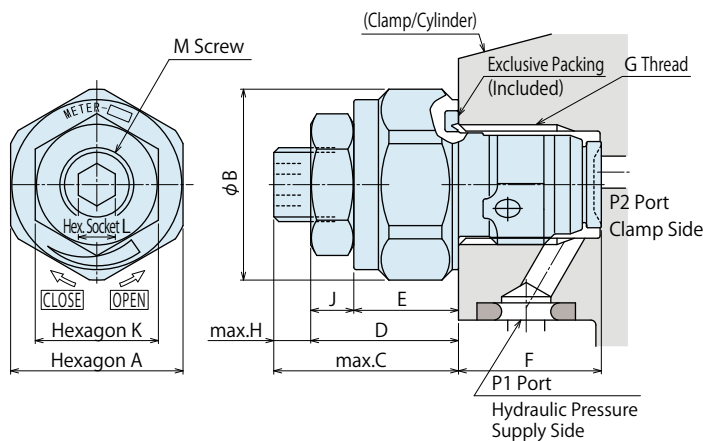

Machining Dimensions of Mounting Area

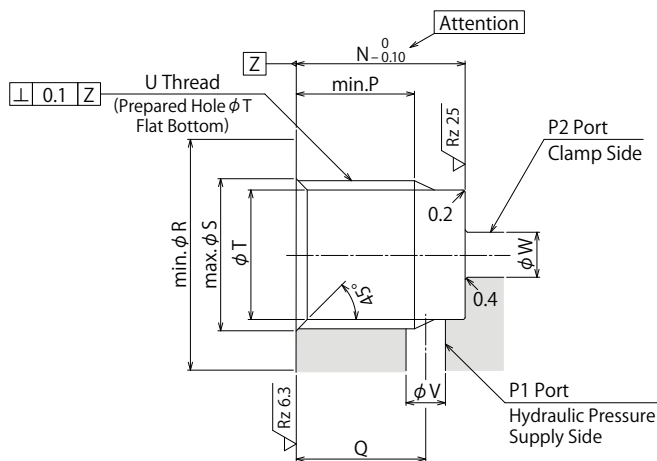

Notes :

1. Since the $\sqrt{Rz\ 6.3}$ area is sealing part, be careful not to damage it.
2. Since the $\sqrt{Rz\ 12.5}$ area is the metal sealing part of BZL, be careful not to damage it. (Especially when deburring)
3. No cutting chips or burr should be at the tolerance part of machining hole.
4. As shown in the drawing, P1 port is used as the hydraulic supply side and P2 port as the clamp side.
5. If mounting plugs or fittings with G thread specification available in the market, the dimension '※1' should be 12.5.

Notes

1. Please read "Notes on Hydraulic Cylinder Speed Control Unit" for proper hydraulic circuit design.
Improper circuit design may lead to malfunctions and damages. (Refer to P.1356)
2. It is dangerous to release the air under high pressure. It must be done under lower pressure.
(For reference : the minimum operating range of the product within the circuit.)

(mm)

Model No.	BZL0101-□	BZL0201-□	BZL0301-□
A	14	18	22
B	15.5	20	24
C	15	16	19
D	12	13	16
E	8.5	9.5	11
F	(11.6)	(15.1)	(17.6)
G	G1/8	G1/4	G3/8
H	3	3	3
J	3.5	3.5	5
K	10	10	13
L	3	3	4
M (Nominal×Pitch)	M6×0.75	M6×0.75	M8×0.75
N	11.5	15	17.5
P	8.5	11※1	13
Q	9	11.5	13
R (Flat Surface Area)	16	20.5	24.5
S	10	13.5	17
T	8.7	11.5	15
U	G1/8	G1/4	G3/8
V	2 ~ 3	3 ~ 4	4 ~ 5
W	2.5 ~ 5	3.5 ~ 7	4.5 ~ 9

High-Power
Series

Pneumatic Series

Hydraulic Series

Valve / Coupler
Hydraulic UnitManual Operation
Accessories

Cautions / Others

Hole Clamp

SFA
SFC

Swing Clamp

LHA
LHC
LHS
LHW
LG/LT
TLA-2
TLB-2
TLA-1

Link Clamp

LKA
LKC
LKW
LJ/LM
TMA-2
TMA-1

Work Support

LD
LC
TNC
TCAir Sensing
Lift Cylinder

LLW

Linear Cylinder /
Compact CylinderLL
LLR
LLU
DP
DR
DS
DT

Block Cylinder

DBA/DBC

Centering Vise

FVA
FVD
FVC

Control Valve

BZL
BZT
BZX/JZG
BZS

Pallet Clamp

VS/VT

Expansion
Locating PinVFL/VFM
VFJ/VFK

Pull Stud Clamp

FP
FQCustomized
Spring Cylinder

DWA/DWB

Model No. Indication (Air Bleed Valve)


BZX0 1 0

1 2



1 G Thread Size

- 1 : Thread Part G1/8A Thread
- 2 : Thread Part G1/4A Thread
- 3 : Thread Part G3/8A Thread



2 Design No.


- 0 : Revision Number

Specifications

Model No.	BZX010	BZX020	BZX030
Max. Operating Pressure MPa	35		
Withstanding Pressure MPa	42		
G Thread Size	G1/8A	G1/4A	G3/8A
Usable Fluid	General Hydraulic Oil Equivalent to ISO-VG-32		
Operating Temperature °C	0 ~ 70		
Tightening Torque for Main Body N·m	10	25	35
Weight g	12	23	36

- Notes :
- Do not over-loosen the plug during air venting.
(Do not loosen further than 2 turns from the fully closed position.)
 - Air bleeding under high pressure is dangerous. It must be done under lower pressure.
(For reference : the minimum operation pressure range of the product within the circuit)
 - Refer to the machining dimensions of BZL mounting area when installing BZX into a hydraulic circuit.

Circuit Symbol

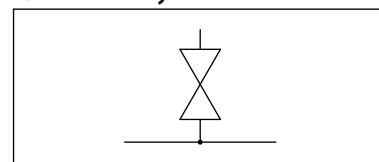

Applicable Products

Model No.	DBA (Double Action) Block Cylinder	DBC (Double Action) Block Cylinder	FVA (Double Action) Centering Vise	FVC (Double Action) Centering Vise	FVD (Double Action) Centering Vise	LC (Single Action) Work Support	LCW (Single Action) Work Support	TC (Single Action) Work Support
BZX010	DBA0250-C□	DBC0250-C□	FVA0401	FVC0630	FVD1600	LC0263-C□-□	LCW0363-C□	TC0403-C□-□-□
	DBA0320-C□	DBC0320-C□	FVA0631		FVD2500	LC0303-C□□-□	LCW0403-C□	TC0483-C□-□-□
			FVA1001			LC0363-C□□-□	LCW0483-C□	TC0553-C□-□-□
						LC0403-C□□-□	LCW0553-C□	TC0653-C□-□-□
						LC0483-C□□-□	LCW0653-C□	TC0753-C□-□-□
						LC0553-C□□-□		
BZX020	DBA0400-C□	DBC0400-C□		FVC1000	FVD4000	LC0753-C□□-□		
	DBA0500-C□	DBC0500-C□		FVC1600		LC0903-C□□-□		

● Applicable Products


Model No.	LHA (Double Action) Swing Clamp	LHC (Double Action) Swing Clamp	LHD (Double Action) Swing Clamp	LHE (Double Action) High-Power Swing Clamp	LHS (Double Action) Swing Clamp	LHV (Double Action) Swing Clamp	LHW (Double Action) Swing Clamp	LT (Single Action) Swing Clamp	LG (Single Action) Swing Clamp
BZX010	LHA0360-C□□□	LHC0360-C□□□	LHD0400-C□□□	LHE0300-C□	LHS0360-C□□□	LHV0400-C□□□	LHW0401-C□□□	LT0301-C□□□	LG0301-C□□□
	LHA0400-C□□□	LHC0400-C□□□	LHD0480-C□□□	LHE0360-C□	LHS0400-C□□□	LHV0480-C□□□	LHW0481-C□□□	LT0361-C□□□	LG0361-C□□□
	LHA0480-C□□□	LHC0480-C□□□	LHD0550-C□□□	LHE0400-C□	LHS0480-C□□□	LHV0550-C□□□	LHW0551-C□□□	LT0401-C□□□	LG0401-C□□□
	LHA0550-C□□□	LHC0550-C□□□		LHE0480-C□	LHS0550-C□□□			LT0481-C□□□	LG0481-C□□□
BZX020	LHA0650-C□□□	LHC0650-C□□□			LHS0650-C□□□	LHV0650-C□□□	LHW0651-C□□□	LT0651-C□□□	LG0651-C□□□
	LHA0750-C□□□				LHS0750-C□□□	LHV0750-C□□□	LHW0751-C□□□	LT0751-C□□□	LG0751-C□□□
BZX030	LHA0900-C□□□				LHS0900-C□□□				LG0901-C□□□
	LHA1050-C□□□				LHS1050-C□□□				LG1051-C□□□

Model No.	LGV (Single Action) Swing Clamp
BZX010	LGV0400-C□□
	LGV0480-C□□
	LGV0550-C□□
BZX020	LGV0650-C□□
	LGV0750-C□□
BZX030	

Model No.	LKA (Double Action) Link Clamp	LKC (Double Action) Link Clamp	LKE (Double Action) High-Power Link Clamp	LKK (Double Action) Universal Clamp	LKV (Double Action) Link Clamp	LKW (Double Action) Link Clamp	LM (Single Action) Link Clamp	LJ (Single Action) Link Clamp	LJV (Single Action) Link Clamp
BZX010	LKA0360-C□□□	LKC0400-C□□□	LKE0300-C□	LKK0360-C□□	LKV0400-C□□□	LKW0401-C□□□	LM0300-C□	LJ0302-C□	LJV0400-C□□□
	LKA0400-C□□□	LKC0480-C□□□	LKE0360-C□	LKK0400-C□□	LKV0480-C□□□	LKW0481-C□□□	LM0360-C□	LJ0362-C□	LJV0480-C□□□
	LKA0480-C□□□	LKC0550-C□□□	LKE0400-C□	LKK0480-C□□	LKV0550-C□□□	LKW0551-C□□□	LM0400-C□	LJ0402-C□	LJV0550-C□□□
	LKA0550-C□□□		LKE0480-C□	LKK0550-C□□			LM0480-C□	LJ0482-C□	
BZX020	LKA0650-C□□□	LKC0650-C□□□		LKK0650-C□□	LKV0650-C□□□	LKW0651-C□□□	LM0650-C□	LJ0652-C□	LJV0650-C□□□
	LKA0750-C□□□				LKV0750-C□□□	LKW0751-C□□□	LM0750-C□	LJ0752-C□	LJV0750-C□□□
BZX030	LKA0900-C□□□							LJ0902-C□	
	LKA1050-C□□□							LJ1052-C□	

Model No.	LFW (Double Action) Link Clamp	LFA (Double Action) Link Clamp	LSA (Double Action) Side Clamp	LSE (Double Action) High-Power Side Clamp	LL (Double Action) Linear Cylinder	LLR (Double Action) Linear Cylinder	LLV (Double Action) Lift Cylinder	LLW (Double Action) Lift Cylinder	TTA (Double Action) Linear Cylinder
BZX010	LFW0480-C□□	LFA0480-C□□	LSA0360-C□	LSE0360-C□	LL0360-C□□□	LLR0360-C□□□	LLV0360-C□□□	LLW0361-C□□□	TTA0360-C□□□
	LFW0550-C□□	LFA0550-C□□			LL0400-C□□□	LLR0400-C□□□	LLV0400-C□□□	LLW0401-C□□□	TTA0400-C□□□
					LL0480-C□□□	LLR0480-C□□□	LLV0480-C□□□	LLW0481-C□□□	TTA0480-C□□□
					LL0550-C□□□	LLR0550-C□□□			TTA0550-C□□□
BZX020	LFW0650-C□□	LFA0650-C□□			LL0650-C□□□	LLR0650-C□□□			TTA0650-C□□□
	LFW0750-C□□	LFA0750-C□□			LL0750-C□□□	LLR0750-C□□□			
BZX030					LL0900-C□□□	LLR0900-C□□□			
					LL1050-C□□□	LLR1050-C□□□			

● External Dimensions

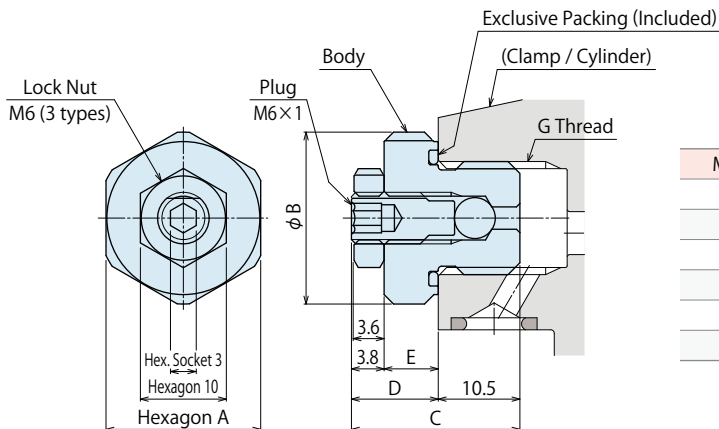

Model No.	BZX010	BZX020	BZX030
A	14	18	22
B	15.5	20	24
C	19.8	20.6	20.6
D	9.3	10.1	10.1
E	5.5	6.3	6.3
G	G1/8	G1/4	G3/8

High-Power Series
Pneumatic Series
Hydraulic Series
Valve / Coupler Hydraulic Unit
Manual Operation Accessories
Cautions / Others

Hole Clamp

SFA
SFC

Swing Clamp

LHA
LHC
LHS
LHW
LG/LT
TLA-2
TLB-2
TLA-1

Link Clamp

LKA
LKC
LKW
LJ/LM
TMA-2
TMA-1

Work Support

LD
LC
TNC
TC

Air Sensing Lift Cylinder

LLW

Linear Cylinder / Compact Cylinder

LL
LLR
LLU
DP
DR
DS
DT

Block Cylinder

DBA/DBC

Centering Vise

FVA
FVD
FVC

Control Valve

BZL
BZT
BZX/JZG
BZS

Pallet Clamp

VS/VT

Expansion Locating Pin

VFL/VFM
VFJ/VFK

Pull Stud Clamp

FP
FQ

Customized Spring Cylinder

DWA/DWB

Model No. Indication (G Thread Plug with Air Bleeding Function) PAT.


JZG0 1 0

1 2



1 G Thread Size

- 1 : Thread Part G1/8A Thread
 2 : Thread Part G1/4A Thread
 3 : Thread Part G3/8A Thread



2 Design No.

- 0 : Revision Number

Specifications

Model No.		JZG010	JZG020	JZG030
Max. Operating Pressure	MPa	35		
Withstanding Pressure	MPa	42		
G Thread Size		G1/8A	G1/4A	G3/8A
Usable Fluid		General Hydraulic Oil Equivalent to ISO-VG-32		
Operating Temperature	°C	0 ~ 70		
Tightening Torque for Main Body N·m	Female Thread Side Material : Steel	10	25	35
	Female Thread Side Material : Aluminum (For LT/LM※1)	8	20	28
Weight	g	7	15	23

Notes : 1. Air bleeding under high pressure is dangerous. It must be done under lower pressure.

(For reference : the minimum operation pressure range of the product within the circuit)

2. Refer to the machining dimensions of BZL mounting area when installing JZG into a hydraulic circuit.

※1. Body material of LT/LM is aluminum alloy, so install it with the tightening torque for aluminum.

Applicable Products

Model No.	LHA (Double Action) Swing Clamp	LHC (Double Action) Swing Clamp	LHD (Double Action) Swing Clamp	LHE (Double Action) High-Power Swing Clamp	LHS (Double Action) Swing Clamp	LHV (Double Action) Swing Clamp	LHW (Double Action) Swing Clamp	LT (Single Action) Swing Clamp	LG (Single Action) Swing Clamp
JZG010	LHA0360-C□□□	LHC0360-C□□□	LHD0400-C□□□	LHE0300-C□	LHS0360-C□□□	LHV0400-C□□□	LHW0401-C□□□	LT0301-C□□□	LG0301-C□□□
	LHA0400-C□□□	LHC0400-C□□□	LHD0480-C□□□	LHE0360-C□	LHS0400-C□□□	LHV0480-C□□□	LHW0481-C□□□	LT0361-C□□□	LG0361-C□□□
	LHA0480-C□□□	LHC0480-C□□□	LHD0550-C□□□	LHE0400-C□	LHS0480-C□□□	LHV0550-C□□□	LHW0551-C□□□	LT0401-C□□□	LG0401-C□□□
	LHA0550-C□□□	LHC0550-C□□□		LHE0480-C□	LHS0550-C□□□			LT0481-C□□□	LG0481-C□□□
JZG020	LHA0650-C□□□	LHC0650-C□□□			LHS0650-C□□□	LHV0650-C□□□	LHW0651-C□□□	LT0651-C□□□	LG0651-C□□□
	LHA0750-C□□□				LHS0750-C□□□	LHV0750-C□□□	LHW0751-C□□□	LT0751-C□□□	LG0751-C□□□
JZG030	LHA0900-C□□□				LHS0900-C□□□				LG0901-C□□□
	LHA1050-C□□□				LHS1050-C□□□				LG1051-C□□□

Model No.	LGV (Single Action) Swing Clamp	DBA (Double Action) Block Cylinder	DBC (Double Action) Block Cylinder	FVA (Double Action) Centering Vise	FVC (Double Action) Centering Vise	FVD (Double Action) Centering Vise	LC (Single Action) Work Support	LCW (Single Action) Work Support	TC (Single Action) Work Support
JZG010	LGV0400-C□□	DBA0250-C□	DBC0250-C□	FVA0401	FVC0630	FVD1600 FVD2500	LC0263-C□□	LCW0363-C□	TC0403-C□□□
	LGV0480-C□□	DBA0320-C□	DBC0320-C□	FVA0631			LC0303-C□□□	LCW0403-C□	TC0483-C□□□
	LGV0550-C□□			FVA1001			LC0363-C□□□	LCW0483-C□	TC0553-C□□□
							LC0403-C□□□	LCW0553-C□	TC0653-C□□□
							LC0483-C□□□	LCW0653-C□	TC0753-C□□□
							LC0553-C□□□		
JZG020	LGV0650-C□□	DBA0400-C□	DBC0400-C□		FVC1000 FVC1600	FVD4000	LC0753-C□□□		
	LGV0750-C□□	DBA0500-C□	DBC0500-C□				LC0903-C□□□		


Applicable Products

Model No.	LKA (Double Action) Link Clamp	LKC (Double Action) Link Clamp	LKE (Double Action) High-Power Link Clamp	LKK (Double Action) Universal Clamp	LKV (Double Action) Link Clamp	LKW (Double Action) Link Clamp	LM (Single Action) Link Clamp	LJ (Single Action) Link Clamp	LJV (Single Action) Link Clamp
JZG010	LKA0360-C□□□	LKC0400-C□□□	LKE0300-C□	LKK0360-C□	LKV0400-C□□□	LKW0401-C□□□	LM0300-C□	LJ0302-C□	LJV0400-C□□□
	LKA0400-C□□□	LKC0480-C□□□	LKE0360-C□	LKK0400-C□	LKV0480-C□□□	LKW0481-C□□□	LM0360-C□	LJ0362-C□	LJV0480-C□□□
	LKA0480-C□□□	LKC0550-C□□□	LKE0400-C□	LKK0480-C□	LKV0550-C□□□	LKW0551-C□□□	LM0400-C□	LJ0402-C□	LJV0550-C□□□
	LKA0550-C□□□		LKE0480-C□	LKK0550-C□			LM0480-C□	LJ0482-C□	
JZG020	LKA0650-C□□□	LKC0650-C□□□		LKK0650-C□	LKV0650-C□□□	LKW0651-C□□□	LM0650-C□	LJ0652-C□	LJV0650-C□□□
	LKA0750-C□□□				LKV0750-C□□□	LKW0751-C□□□	LM0750-C□	LJ0752-C□	LJV0750-C□□□
JZG030	LKA0900-C□□□							LJ0902-C□	
	LKA1050-C□□□							LJ1052-C□	

Model No.	TLA-1 (Single Action) Swing Clamp	TLA-2 (Double Action) Swing Clamp	TLB-2 (Double Action) Swing Clamp	TLV-2 (Double Action) Swing Clamp	TMA-1 (Double Action) Link Clamp	TMA-2 (Double Action) Link Clamp	TMV-2 (Double Action) Link Clamp
JZG010	TLA0402-1C□	TLA0401-2C□□	TLB0401-2C□□	TLV0800-2C□□	TMA0250-1C□	TMA0251-2C□	TMV0400-2C□□
	TLA0602-1C□	TLA0601-2C□□	TLB0601-2C□□	TLV1000-2C□□	TMA0400-1C□	TMA0401-2C□	TMV0600-2C□□
	TLA0802-1C□	TLA0801-2C□□	TLB0801-2C□□	TLV1600-2C□□	TMA0600-1C□	TMA0601-2C□	TMV1000-2C□□
	TLA1002-1C□	TLA1001-2C□□	TLB1001-2C□□		TMA1000-1C□	TMA1001-2C□	
	TLA1602-1C□	TLA1601-2C□□	TLB1601-2C□□				
JZG020	TLA2002-1C□	TLA2001-2C□□	TLB2001-2C□□	TLV2000-2C□□	TMA1600-1C□	TMA1601-2C□	TMV1600-2C□□
	TLA2502-1C□	TLA2501-2C□□	TLB2501-2C□□		TMA2500-1C□	TMA2501-2C□	
	TLA4002-1C□	TLA4001-2C□□	TLB4001-2C□□		TMA3200-1C□	TMA3201-2C□	

Model No.	LFA (Double Action) Link Clamp	LFW (Double Action) Link Clamp	LSA (Double Action) Side Clamp	LSE (Double Action) High-Power Side Clamp	LL (Double Action) Linear Cylinder	LLR (Double Action) Linear Cylinder	LLV (Double Action) Lift Cylinder	LLW (Double Action) Lift Cylinder	TTA (Double Action) Linear Cylinder
JZG010	LFA0480-C□□	LFW0480-C□□	LSA0360-C□	LSE0360-C□	LL0360-C□□□	LLR0360-C□□□	LLV0360-C□□□	LLW0361-C□□□	TTA0360-C□□□
	LFA0550-C□□	LFW0550-C□□			LL0400-C□□□	LLR0400-C□□□	LLV0400-C□□□	LLW0401-C□□□	TTA0400-C□□□
					LL0480-C□□□	LLR0480-C□□□	LLV0480-C□□□	LLW0481-C□□□	TTA0480-C□□□
					LL0550-C□□□	LLR0550-C□□□			TTA0550-C□□□
JZG020	LFA0650-C□□	LFW0650-C□□			LL0650-C□□□	LLR0650-C□□□			TTA0650-C□□□
	LFA0750-C□□	LFW0750-C□□			LL0750-C□□□	LLR0750-C□□□			
JZG030					LL0900-C□□□	LLR0900-C□□□			
					LL1050-C□□□	LLR1050-C□□□			

External Dimensions

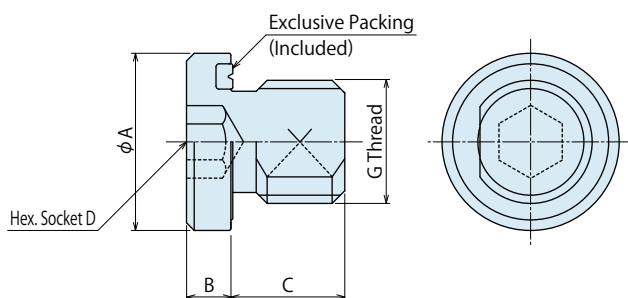

Model No.	(mm)		
	JZG010	JZG020	JZG030
A	14	18	22
B	3.5	4.5	4.5
C	8	9	10
D	5	6	8
G	G1/8A	G1/4A	G3/8A

High-Power Series

Pneumatic Series

Hydraulic Series

Valve / Coupler Hydraulic Unit

Manual Operation Accessories

Cautions / Others

Hole Clamp

SFA
SFC

Swing Clamp

LHA
LHC
LHS
LHW
LG/LT
TLA-2
TLB-2
TLA-1

Link Clamp

LKA
LKC
LKW
LJ/LM
TMA-2
TMA-1

Work Support

LD
LC
TNC
TC

Air Sensing Lift Cylinder

LLW

Linear Cylinder / Compact Cylinder

LL
LLR
LLU
DP
DR
DS
DT

Block Cylinder

DBA/DBC

Centering Vise

FVA
FVD
FVC

Control Valve

BZL
BZT
BZX/JZG
BZS

Pallet Clamp

VS/VT

Expansion Locating Pin

VFL/VFM
VFJ/VFK

Pull Stud Clamp

FP
FQ


Customized Spring Cylinder

DWA/DWB


Cautions

● Installation Notes (For Hydraulic Series)

- 1) Check the Usable Fluid
 - Please use the appropriate fluid by referring to the Hydraulic Fluid List.
- 2) Procedure before Piping
 - The pipeline, piping connector and fixture circuits should be cleaned by thorough flushing.
 - The dust and cutting chips in the circuit may lead to fluid leakage and malfunction.
 - There is no filter provided with Kosmek's product except for a part of valves which prevents foreign materials and contaminants from getting into the circuit.
- 3) Applying Sealing Tape
 - Wrap with tape 1 to 2 times following the screw direction.
 - Pieces of the sealing tape can lead to oil leakage and malfunction.
 - Please implement piping construction in a clear environment to prevent anything getting in products.
- 4) Air Bleeding of the Hydraulic Circuit
 - If the hydraulic circuit has excessive air, the action time may become very long. If air enters the circuit after connecting the hydraulic port or under the condition of no air in the oil tank, please perform the following steps.
 - ① Reduce hydraulic pressure to less than 2MPa.
 - ② Loosen the cap nut of pipe fitting closest to the clamp by one full turn.
 - ③ Shake the pipeline to loosen the outlet of pipe fitting.
Hydraulic fluid mixed with air comes out.

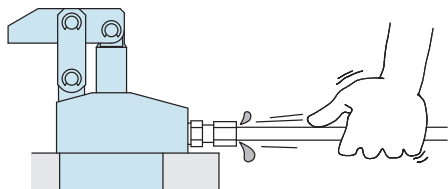

- ④ Tighten the cap nut after bleeding.
- ⑤ It is more effective to release air at the highest point inside the circuit or at the end of the circuit.
(Set an air bleeding valve at the highest point inside the circuit.)

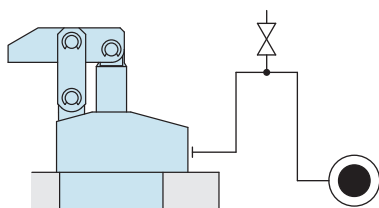

5) Checking Looseness and Retightening

- At the beginning of the machine installation, the bolt and nut may be tightened lightly. Check the looseness and re-tighten as required.

● Hydraulic Fluid List

ISO Viscosity Grade ISO-VG-32		
Maker	Anti-Wear Hydraulic Oil	Multi-Purpose Hydraulic Oil
Showa Shell Sekiyu	Tellus S2 M 32	Morlina S2 B 32
Idemitsu Kosan	Daphne Hydraulic Fluid 32	Daphne Super Multi Oil 32
JX Nippon Oil & Energy	Super Hyrando 32	Super Mulpus DX 32
Cosmo Oil	Cosmo Hydro AW32	Cosmo New Mighty Super 32
ExxonMobil	Mobil DTE 24	Mobil DTE 24 Light
Matsumura Oil	Hydol AW-32	
Castrol	Hyspin AWS 32	

Note : Please contact manufacturers when customers require products in the list above.


● Notes on Hydraulic Cylinder Speed Control Unit




Please pay attention to the cautions below. Design the hydraulic circuit for controlling the action speed of hydraulic cylinder. Improper circuit design may lead to malfunctions and damages. Please review the circuit design in advance.

● Flow Control Circuit for Single Acting Cylinder

For spring return single acting cylinders, restricting flow during release can extremely slow down or disrupt release action. The preferred method is to control the flow during the lock action using a valve that has free-flow in the release direction. It is also preferred to provide a flow control valve at each actuator.

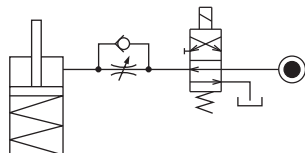

Accelerated clamping speed by excessive hydraulic flow to the cylinder may sustain damage. In this case add flow control to regulate flow. (Please add flow control to release flow if the lever weight is put on at the time of release action when using swing clamps.)

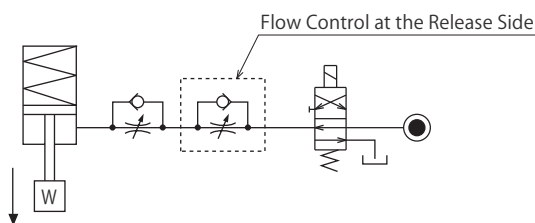

● Flow Control Circuit for Double Acting Cylinder


Flow control circuit for double acting cylinder should have meter-out circuits for both the lock and release sides. Meter-in control can have adverse effect by presence of air in the system.

However, in the case of controlling LKE, TMA, TLA, both lock side and release side should be meter-in circuit.


Refer to P.75 for speed adjustment of LKE.

For TMA and TLA, if meter-out circuit is used, abnormal high pressure is created, which causes oil leakage and damage.

【Meter-out Circuit】 (Except LKE/TMA/TLA)

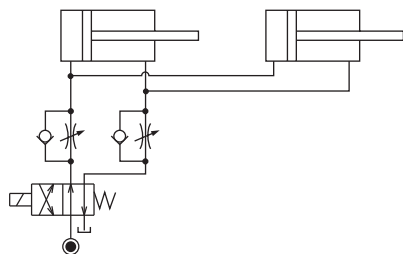


【Meter-in Circuit】 (LKE/TMA/TLA must be controlled with meter-in.)

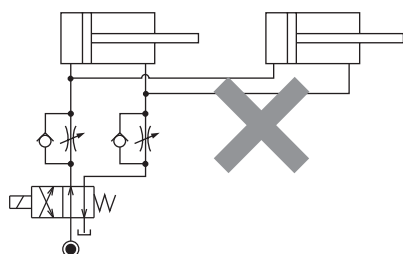


In the case of meter-out circuit, the hydraulic circuit should be designed with the following points.

- ① Single acting components should not be used in the same flow control circuit as the double acting components. The release action of the single acting cylinders may become erratic or very slow.

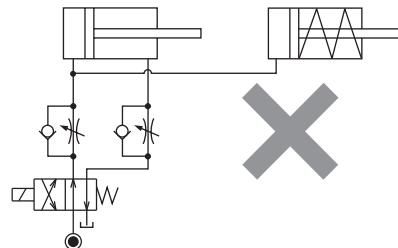


Refer to the following circuit when both the single acting cylinder and double acting cylinder are used together.


- Separate the control circuit.

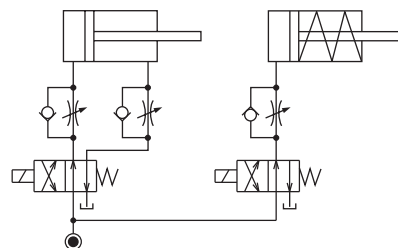

- Reduce the influence of double acting cylinder control unit. However, due to the back pressure in tank line, single action cylinder is activated after double action cylinder works.

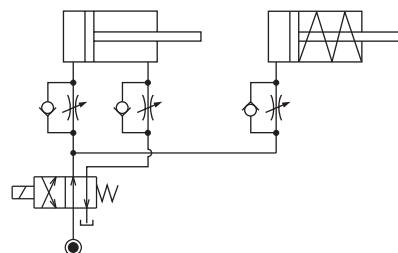

- ② In the case of meter-out circuit, the inner circuit pressure may increase during the cylinder action because of the fluid supply. The increase of the inner circuit pressure can be prevented by reducing the supplied fluid beforehand via the flow control valve. Especially when using sequence valve or pressure switches for clamping detection. If the back pressure is more than the set pressure then the system will not work as it is designed to.

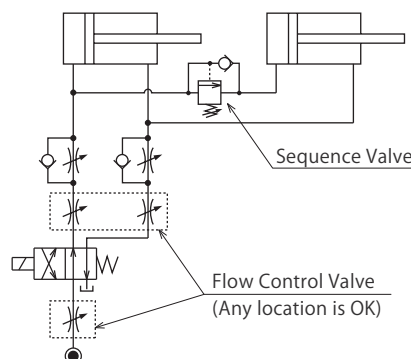

High-Power
Series

Pneumatic Series

Hydraulic Series

Valve / Coupler
Hydraulic Unit

Manual Operation
Accessories

Cautions / Others

Cautions

Installation Notes
(For Hydraulic Series)

Hydraulic Fluid List

Notes on Hydraulic Cylinder
Speed Control Circuit

Notes on Handling

Maintenance/
Inspection

Warranty

Company Profile

Company Profile

Our Products

History

Index


Search by
Alphabetical Order

Sales Offices

● Cautions

● Notes on Handling


- 1) It should be operated by qualified personnel.
- The hydraulic machine and air compressor should be operated and maintained by qualified personnel.
- 2) Do not operate or remove the product unless the safety protocols are ensured.
 - ① The machine and equipment can only be inspected or prepared when it is confirmed that the safety devices are in place.
 - ② Before the product is removed, make sure that the above-mentioned safety devices are in place. Shut off the pressure and power source, and make sure no pressure exists in the air and hydraulic circuits.
 - ③ After stopping the product, do not remove until the temperature drops.
 - ④ Make sure there is no abnormality in the bolts and respective parts before restarting the machine or equipment.
- 3) Do not touch a clamp (cylinder) while it is working. Otherwise, your hands may be injured due to clinching.

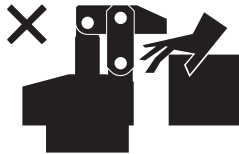


- 4) Do not disassemble or modify.
- If the equipment is taken apart or modified, the warranty will be voided even within the warranty period.

● Maintenance and Inspection

- 1) Removal of the Machine and Shut-off of Pressure Source
 - Before the machine is removed, make sure that safety devices and preventive devices are in place. Shut off the pressure and power source, and make sure no pressure exists in the air and hydraulic circuits.
 - Make sure there is no abnormality in the bolts and respective parts before restarting.
- 2) Regularly clean the area around the piston rod and plunger.
 - If it is used when the surface is contaminated with dirt, it may lead to packing seal damage, malfunctioning and fluid leakage.

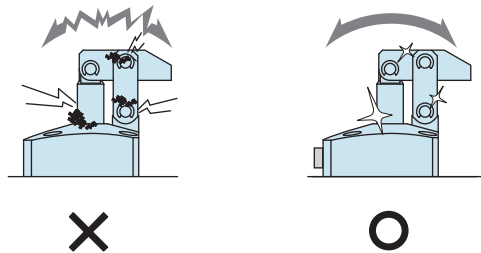

- 3) Please clean out the reference surfaces on a regular basis (taper reference surface and seating surface) of the locating products. (VS/VT/VFL/VFM/VFJ/VFK/WVS/VWM/VWK/VX/VXE/VXF)
 - The locating products, except VX/VXE/VXF model, can remove contaminants with cleaning functions. However, hardened cutting chips, adhesive coolant and others may not be removed. Make sure there are no contaminants before installing a workpiece/pallet.
 - Continuous use with contaminant on components will lead to locating accuracy failure, malfunction and fluid leakage.

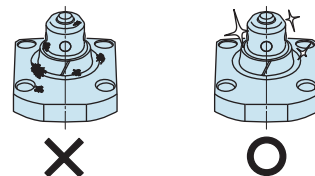

- 4) If disconnecting by couplers, air bleeding should be carried out on a regular basis to avoid air mixed in the circuit.
- 5) Regularly tighten nut, bolt, pin, cylinder, pipe line and others to ensure proper use.
- 6) Make sure the hydraulic fluid has not deteriorated.
- 7) Make sure there is a smooth action without an irregular noise.
 - Especially when it is restarted after left unused for a long period, make sure it can be operated correctly.
- 8) The products should be stored in the cool and dark place without direct sunshine or moisture.
- 9) Please contact us for overhaul and repair.

Cautions[Installation Notes
\(For Hydraulic Series\)](#)[Hydraulic Fluid List](#)[Notes on Hydraulic Cylinder
Speed Control Circuit](#)[Notes on Handling](#)[Maintenance/
Inspection](#)[Warranty](#)**Company Profile**[Company Profile](#)[Our Products](#)[History](#)**Index**[Search by](#)[Alphabetical Order](#)**Sales Offices**

● Warranty

1) Warranty Period

- The product warranty period is 18 months from shipment from our factory or 12 months from initial use, whichever is earlier.

2) Warranty Scope

- If the product is damaged or malfunctions during the warranty period due to faulty design, materials or workmanship, we will replace or repair the defective part at our expense.

Defects or failures caused by the following are not covered.

- ① If the stipulated maintenance and inspection are not carried out.
- ② If the product is used while it is not suitable for use based on the operator's judgment, resulting in defect.
- ③ If it is used or operated in an inappropriate way by the operator.
(Including damage caused by the misconduct of the third party.)
- ④ If the defect is caused by reasons other than our responsibility.
- ⑤ If repair or modifications are carried out by anyone other than Kosmek, or without our approval and confirmation, it will void warranty.
- ⑥ Other caused by natural disasters or calamities not attributable to our company.
- ⑦ Parts or replacement expenses due to parts consumption and deterioration.
(Such as rubber, plastic, seal material and some electric components.)

Damages excluding from direct result of a product defect shall be excluded from the warranty.

Sales Offices


Sales Offices across the World

Japan	KOSMEK LTD. HEAD OFFICE	TEL. +81-78-991-5162 FAX. +81-78-991-8787 1-5, 2-chome, Murotani, Nishi-ku, Kobe-city, Hyogo, Japan 651-2241
USA	KOSMEK (USA) LTD. Overseas Subsidiary	TEL. +1-630-620-7650 FAX. +1-630-620-9015 650 Springer Drive, Lombard, IL 60148 USA
	KOSMEK USA ATLANTA BRANCH OFFICE	TEL. +1-630-620-7650 303 Perimeter Center North, Suite 300, Atlanta, GA 30346 USA
Mexico	KOSMEK USA MEXICO BRANCH OFFICE	TEL. +52-442-851-1377 Av. Loma Pinal de Amoles 320-piso PH oficina 504 interior 13, Vista Dorada, 76060 Santiago de Querétaro, Qro. Mexico
Europe	KOSMEK EUROPE GmbH Overseas Subsidiary	TEL. +43-463-287587 FAX. +43-463-287587-20 Schleppeplatz 2 9020 Klagenfurt am Wörthersee Austria
China	KOSMEK (CHINA) LTD. Overseas Subsidiary	TEL.+86-21-54253000 FAX. +86-21-54253709 Room601, RIVERSIDE PYRAMID No.55, Lane21, Pusan Rd, Pudong Shanghai China
	KOSMEK (CHINA) LTD. Dongguan Office Overseas Subsidiary (Sales Office)	TEL.+86-769-85300880 Room 603, Xinchuang Power Building (No. 122-1 West Houjie Avenue), Houjie Town, Dongguan City, Guangdong Province, China
	KOSMEK (CHINA) LTD. Wuhan Office Overseas Subsidiary (Sales Office)	TEL.+86-15802172393 Room 309, Chuangu Technology Building, 266 Taizihu Rd, Zhuankou Subdistrict, Caidian District, Wuhan 430056, Hubei Province, China
India	KOSMEK LTD. - INDIA Branch	TEL. +91-9880561695 4A/Old No:649, Ground Floor, 4th D cross, MM Layout, Kavalbyrasandra, RT Nagar, Bangalore -560032 India
Thailand	KOSMEK Thailand Representative Office Representative Office	TEL. +66(0)2-059-2010 No.139, Blue Chips Building, 4th Floor, Room No.422, Soi Sukhumvit 63 (Thong Lor 10), Sukhumvit Road, Khlong Tan Nuea, Wattana, Bangkok 10110, Thailand
Taiwan	FULL LIFE TRADING CO., LTD. Distributor	TEL. +886-2-82261860 FAX. +886-2-82261890 16F-4, No.2, Jian Ba Rd., Zhonghe District, New Taipei City Taiwan 23511
Philippines	G.E.T. Inc, Phil. Distributor	TEL.+63-2-310-7286 FAX. +63-2-310-7286 Victoria Wave Special Economic Zone Mt. Apo Building, Brgy. 186, North Caloocan City, Metro Manila, Philippines 1427
Indonesia	PT. Yamata Machinery Sales Distributor	TEL. +62-21-29628607 FAX. +62-21-29628608 Delta Commercial Park I, Jl. Kenari Raya B-08, Desa Jayamukti Kec. Cikarang Pusat Kab. Bekasi 17530 Indonesia

Sales Offices in Japan

Head Office Osaka Sales Office Overseas Sales	TEL. 078-991-5162 FAX. 078-991-8787 1-5, 2-chome, Murotani, Nishi-ku, Kobe-city, Hyogo, 651-2241, Japan
Tokyo Sales Office	TEL. 048-652-8839 FAX. 048-652-8828 81, 4-chome, Onari-cho, Kita-ku, Saitama City, Saitama, 331-0815, Japan
Nagoya Sales Office	TEL. 0566-74-8778 FAX. 0566-74-8808 10-1, 2-chome, Misono-cho, Anjo City, Aichi, 446-0076, Japan
Fukuoka Sales Office	TEL. 092-433-0424 FAX. 092-433-0426 8-10-101, 1-chome, Kamimuta, Hakata-ku, Fukuoka City, Fukuoka, 812-0006, Japan

Global Network

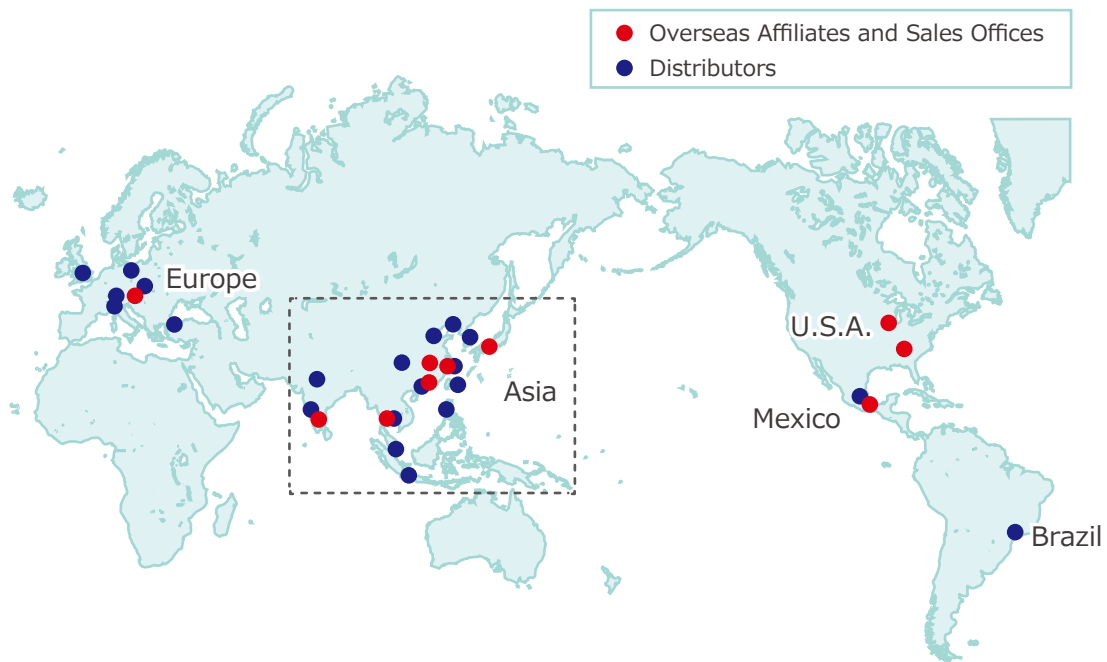

Asia Detailed Map



● FOR FURTHER INFORMATION ON UNLISTED SPECIFICATIONS AND SIZES, PLEASE CALL US.
 ● SPECIFICATIONS IN THIS CATALOG ARE SUBJECT TO CHANGE WITHOUT NOTICE.

