



**New Product** *New Concept*

# Smart Series

**Line-up of 4 models** Many more to come

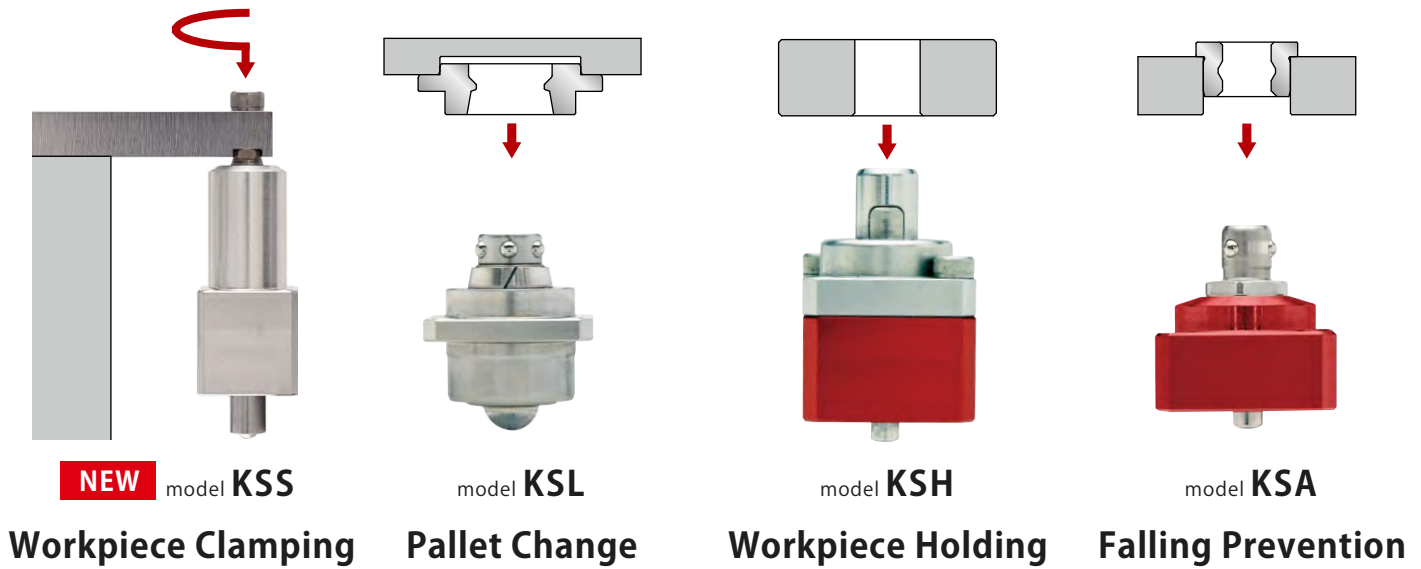

## Powered by Any Power Source

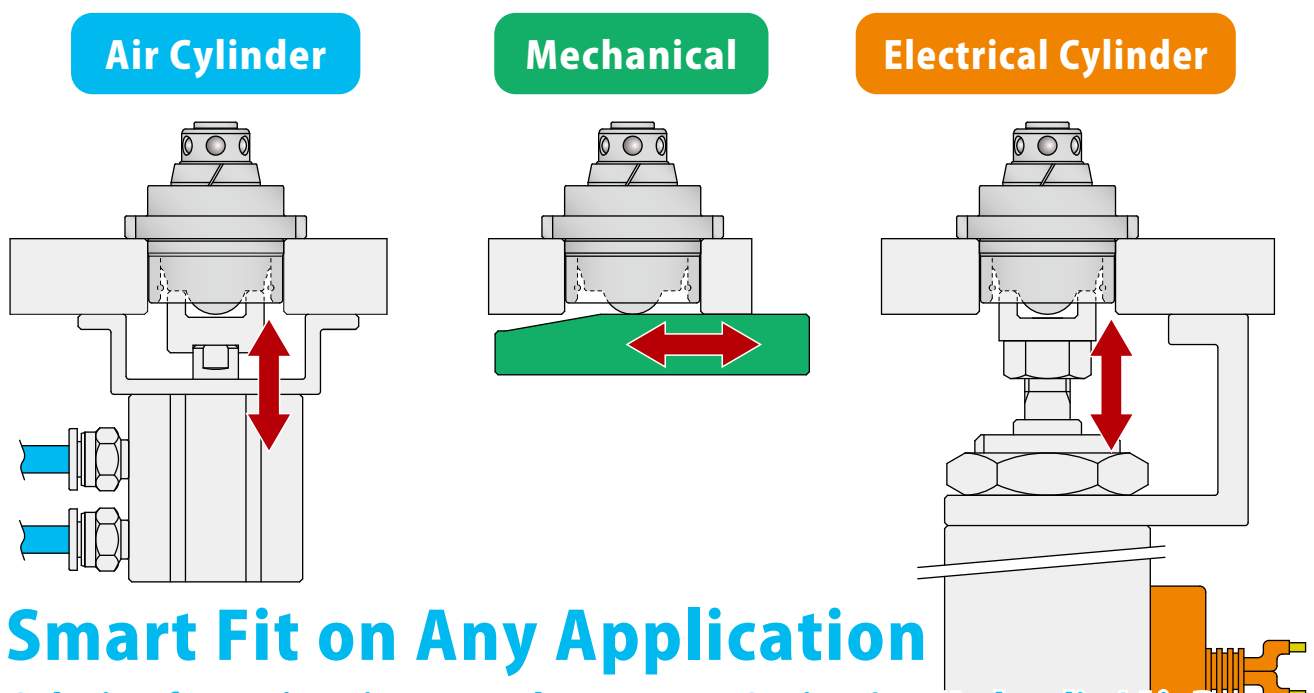

## Smart Fit on Any Application

Solution for various issues such as Energy Saving (No Hydraulic / Air Pressure, No Driving Source), All Electric System, Carbon Neutrality, SDGs, etc.

model **KSL**

Location Clamp

**KOSMEK's  
New Idea**

Mechanical



## Location Clamp


model **KSL** Spring Lock / External Force Release

Enables easier pallet change and setup.

Locating Repeatability : 0.01mm


### Action Description

&lt;Release&gt;

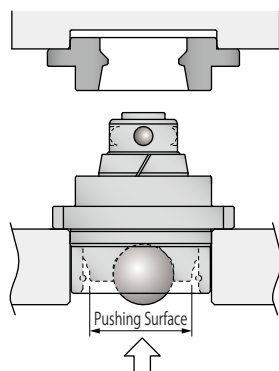

When the pushing surface is pushed in, the steel ball retracts.

&lt;Lock&gt;

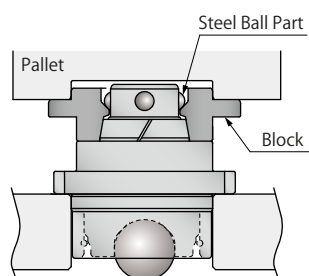

When the pushing surface is released, the steel ball expands with the built-in spring. It pulls in the block, and completes the clamping / locating.

### Specifications

Model No.		KSL0050-□□	
Clamping Force		N	50
Locating Repeatability		mm	0.010
Releasing Force	N	Min.	Approx. 60
		Max.	Approx. 200
Lifting Up Stroke		mm	0.4
Allowable Offset when fixture loading		mm	0.8
Max. Loading Weight		kg	5
Operating Temperature		℃	0 ~ 70
Weight	g	Clamp Side	Approx. 35
		Block Side	Approx. 14

- ※ For detailed specifications, please check our website or contact us.
- ※ For brief dimensions, please refer to the reverse side of this brochure.
- ※ This product has no function that prevents contaminants. Do not use under environment with coolant or cutting chips.



## Hole Clamp


model **KSH** Spring Lock / External Force Release

Gripper expands and clamps in the workpiece hole.

Workpiece Hole Diameter  $\pm 0.3$  :  $\phi 6$ ,  $\phi 6.5$ ,  $\phi 7$ ,  $\phi 7.5$ ,  $\phi 8$ ,  $\phi 8.5$ ,  $\phi 9$ ,  $\phi 9.5$  and  $\phi 10$


### Action Description

<Release>

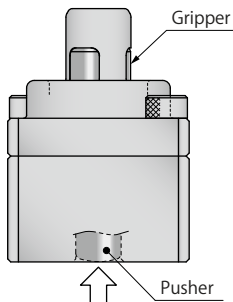

When the pusher is pushed in, the gripper retracts.

<Lock>

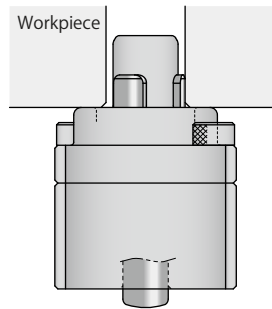


When the pusher is released, the gripper expands with the built-in spring and grips a workpiece.

### Specifications

Model No.	<b>KSH0050-□-□</b>	
Gripping Force	N	50
Locating Repeatability(D/C)	mm	0.03
Floating Range of Expanding Area(M)	mm	$\pm 0.2$
Releasing Force	N	Min.
		Max.
		60
		200
Operating Temperature	°C	0 ~ 70
Weight	g	Approx. 55

- ※ For detailed specifications, please check our website or contact us.
- ※ For brief dimensions, please refer to the reverse side of this brochure.
- ※ This product has no function that prevents contaminants.
- Do not use under environment with coolant or cutting chips.

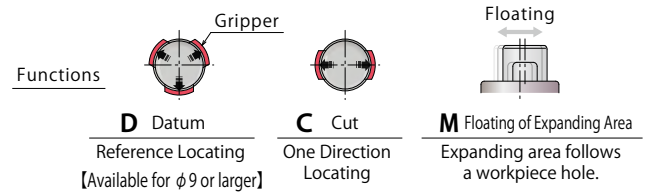

## Ball Lock Cylinder

model **KSA** Spring Lock / External Force Release


Securely transfers pallets and plates.

Prevents pallet/plate drops with the steel balls (Ball Lock).

Pulling Capacity (Holding Force) : 50N


### Action Description

<Release>

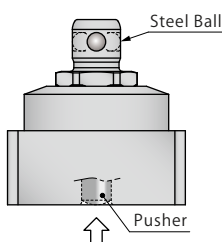

When the pusher is pushed in, the steel ball retracts.

<Lock>

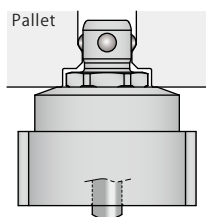

When the pusher is released, the steel ball expands with the built-in spring and holds a pallet.

### Specifications

Model No.	<b>KSA0060</b>	
Pulling Capacity (Holding Force)	N	50
Releasing Force	N	Min.
		Max.
		Approx. 10
		Approx. 30
Operating Temperature	°C	0 ~ 70
Weight	g	Approx. 35

- ※ For detailed specifications, please check our website or contact us.
- ※ For brief dimensions, please refer to the reverse side of this brochure.
- ※ This product has no function that prevents contaminants.
- Do not use under environment with coolant or cutting chips.



## NEW Swing Clamp

model **KSS** Spring Lock / External Force Release

The lever descends as it swings to clamp a workpiece.

Swing Complete Position Repeatability :  $\pm 1^\circ$

Action Description and Specifications on the next page.

Swing Clamp

# Smart Series Swing Clamp


Model KSS



## High Rigidity, Long Operational Life and High Accuracy with Powerful Swing Mechanism

Swing Angle Position Repeatability  $\pm 1^\circ$


### Action Description

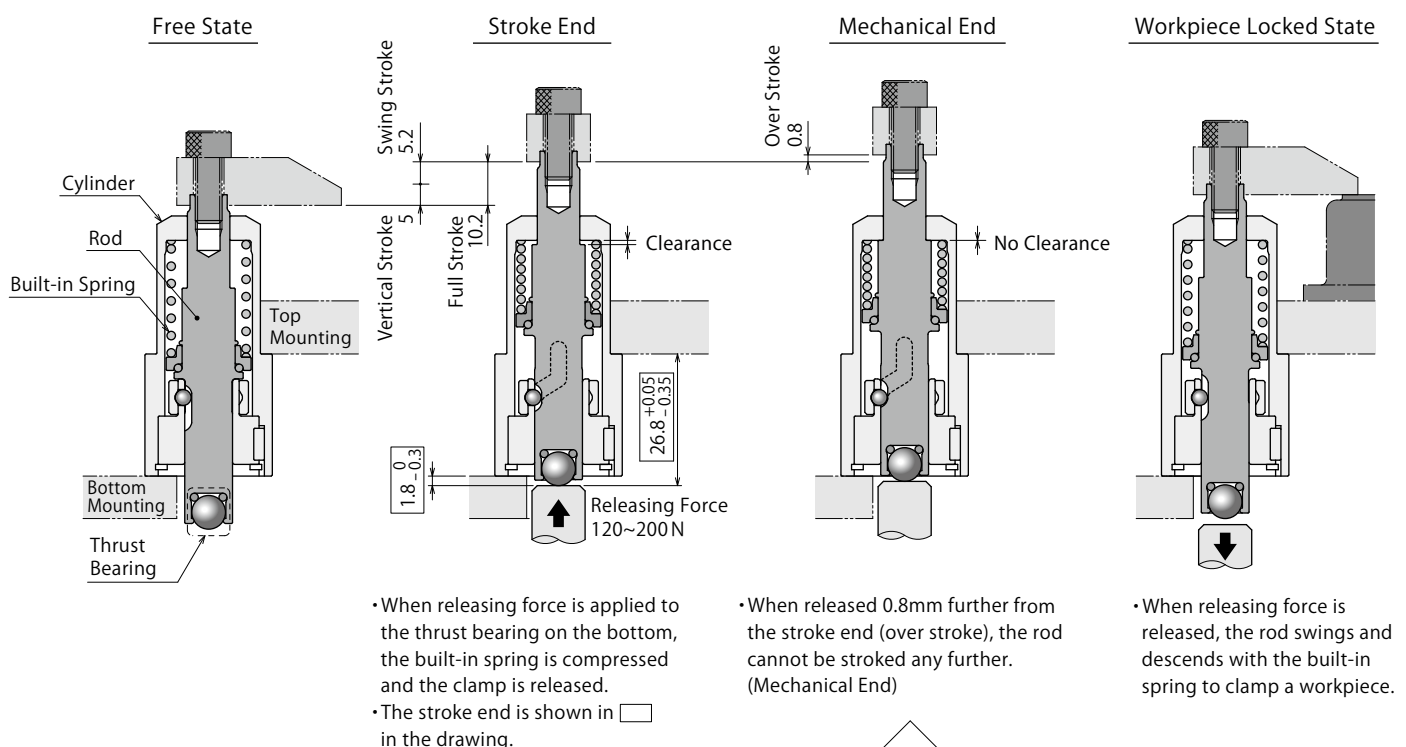


### Recommended Releasing Point

Applying a thrust force exceeding 200N at the mechanical end position may damage the inside of the clamp.

Especially in case of a driving device using as shown on P.4 "Application Examples", set the clamp to a position where it stops within the over stroke range before the mechanical end when released to avoid overloading.

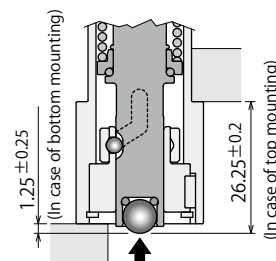

## Action Description

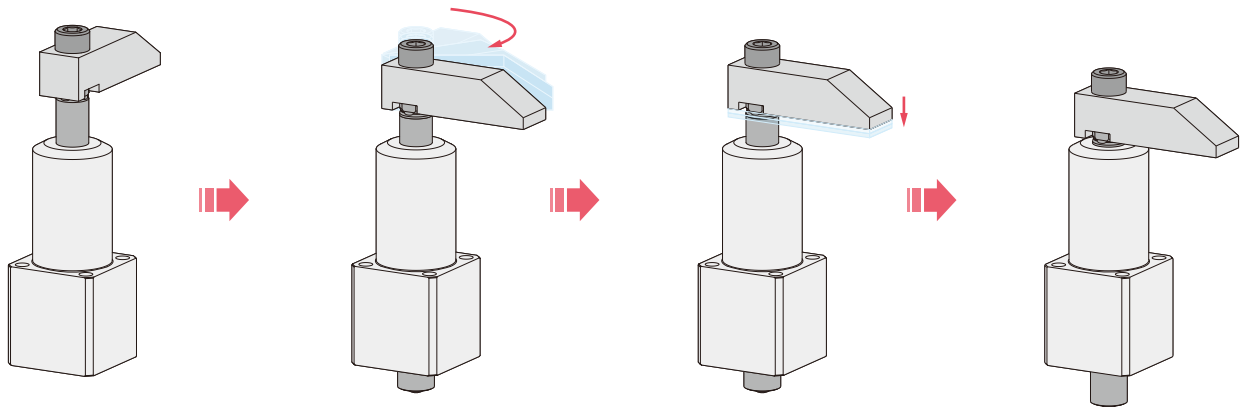

Before Swing: Released  
(Stroke End/  
Mechanical End)

The lever descends  
as it swings.

After swing completion,  
it descends vertically.



Action Completed : Clamped  
(Free State /  
Workpiece Locked State)

## Application Examples

When Locked

When Released

Operation by sliding cam

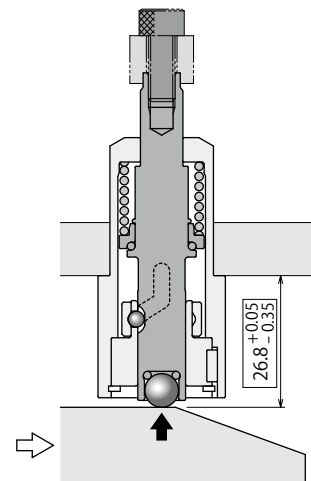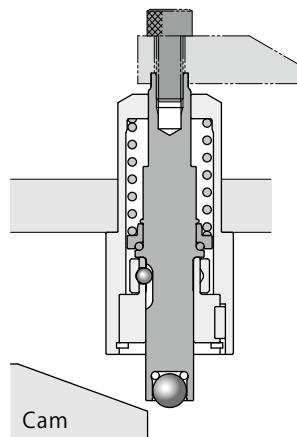

## Model No. Indication

**KSS005 0 - R**

1
2


### 1 Design No.

**0** : Revision Number

### 2 Swing Direction when Clamping

**R** : Clockwise

**L** : Counter-Clockwise

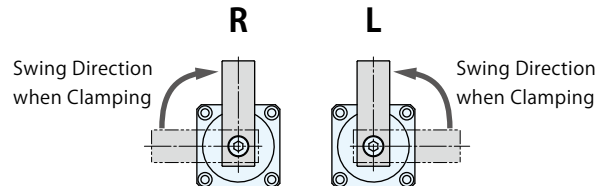



## Specifications

Model No.		KSS0050-□	
Over Stroke ※1	mm	0.8	
Full Stroke	mm	10.2	
Swing Stroke (90° )	mm	5.2	
Vertical Stroke	mm	5	
90° Swing Angle Accuracy		90° ±3°	
Swing Completion Position Repeatability		±1°	
Spring Force	at Release (Max.)	N	85.9
	at Start of Vertical Stroke	N	68.7
	at the Middle of Vertical Stroke	N	61.6
	at Completion of Vertical Stroke	N	54.4
Releasing Force	Minimum	N	120
	Maximum ※1	N	200
Operating Temperature		℃	0 ~ 70
Weight		g	Approx. 95

Note :


※1. Applying releasing force exceeding the maximum specification value at the mechanical end may damage the inside of the clamp.  
When stopping at the mechanical end, make sure that releasing force does not exceed the maximum specification value.  
If releasing force exceeds the maximum specification value, stop the clamp within the over stroke range.

## Clamping Force Curve

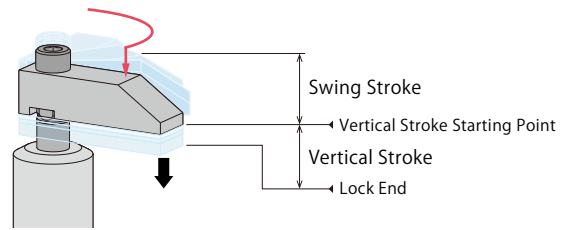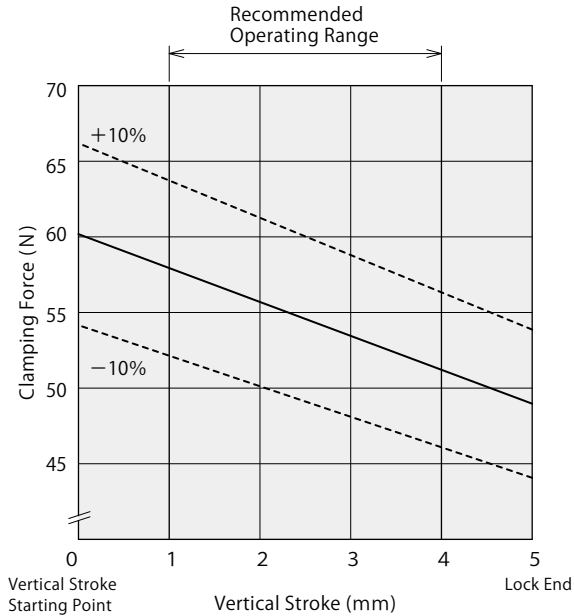


Note :

1. This graph is applicable to lever length below 60 mm. Please contact us for use with lever length over 60mm.

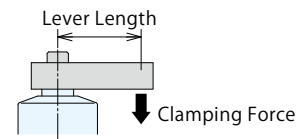

## Allowable Swing Time Graph

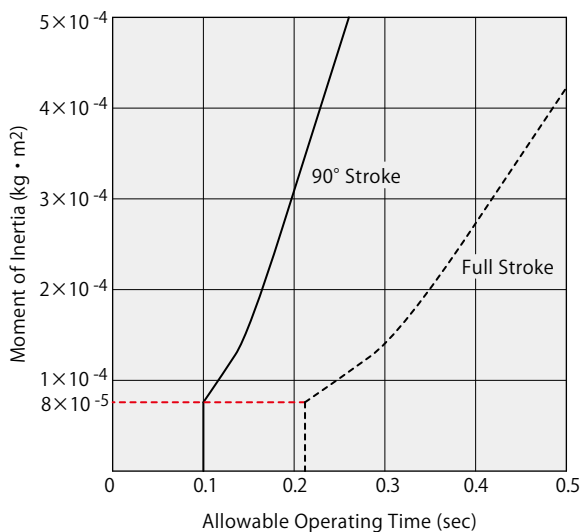


Notes :

1. The graph shows allowable swing time against the moment of inertia of a lever.
2. Lever with a large inertia sometimes does not work depending on lever mounting position.
3. For any lever inertia moment, minimum 90° swing time should be 0.1 sec. Excessive swing speed can reduce stopping accuracy and damage internal components.

How to Calculate the Moment of Inertia (Estimated)


I : Moment of Inertia (kg·m²) L, L<sub>1</sub>, L<sub>2</sub>, K, b : Length (m) m, m<sub>1</sub>, m<sub>2</sub>, m<sub>3</sub> : Weight (kg)

- ① For a rectangular plate (cuboid), the rotating shaft is vertically on one side of the plate.

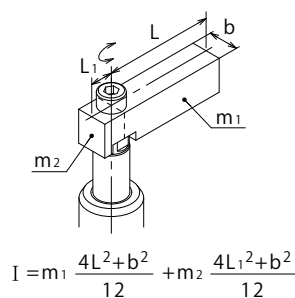


$$I = m_1 \frac{4L^2 + b^2}{12} + m_2 \frac{4L_1^2 + b^2}{12}$$

- ② For a rectangular plate (cuboid), the rotating shaft is vertically on the gravity center of the plate.

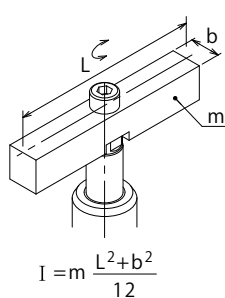

$$I = m \frac{L^2 + b^2}{12}$$


- ③ Load is applied on the lever front end.

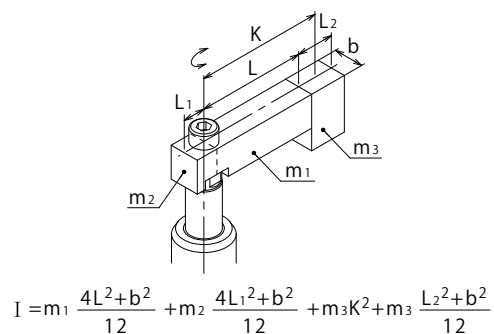

$$I = m_1 \frac{4L^2 + b^2}{12} + m_2 \frac{4L_1^2 + b^2}{12} + m_3 K^2 + m_3 \frac{L_2^2 + b^2}{12}$$

## External Dimensions

※ The drawing shows the released state (stroke end position).

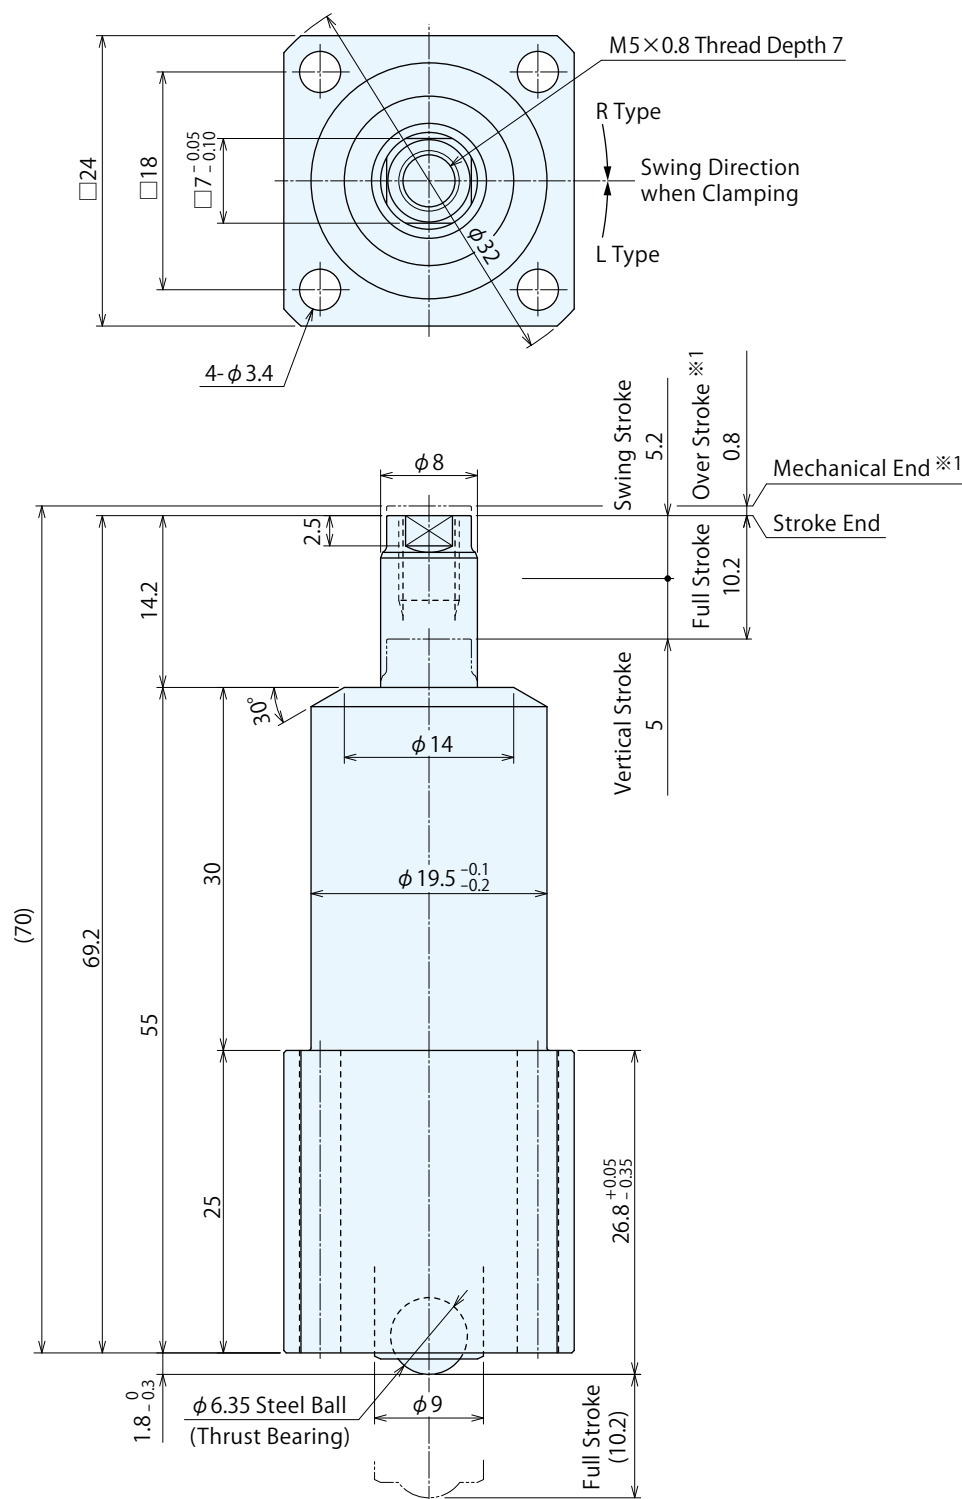


Notes :

- ※1. Applying releasing force exceeding the maximum specification value at the mechanical end may damage the inside of the clamp. When stopping at the mechanical end, make sure that releasing force does not exceed the maximum specification value. If releasing force exceeds the maximum specification value, stop the clamp within the over stroke range.
- 1. Mounting bolts are not provided. Please prepare them according to the mounting position.



## ● Lever Design Dimensions

※ Reference for designing swing lever.

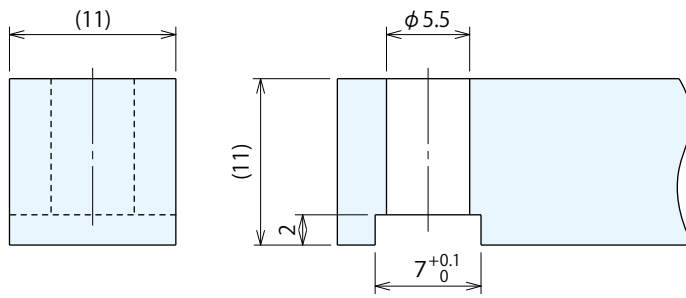


Note :

1. Swing lever should be designed with its length according to the allowable swing time graph and the clamping force curve.

## Cautions

### Notes for Design

- 1) Check Specifications
  - This product is locked by the built-in spring and released by applying external force.  
Apply a force in the range of 120 to 200N to release.
  - Please use each product according to the specifications.
- 2) Swing lever should be designed to make the moment of inertia small.
  - Large moment of inertia will degrade the lever's stopping accuracy and cause damage to the clamp. Additionally, the clamp may not function, depending on lever mounting position.
  - Set the swing time according to the moment of inertia. Refer to "Allowable Swing Time Graph" and make sure to operate clamps within the allowable operation time.
- 3) Protect the exposed area of the piston rod when using on a welding fixture.
  - If spatter attaches to the sliding surface it could lead to malfunction.
- 4) When clamping on a sloped surface of the workpiece.
  - Make sure the clamping surface and the mounting surface of the clamp are parallel.

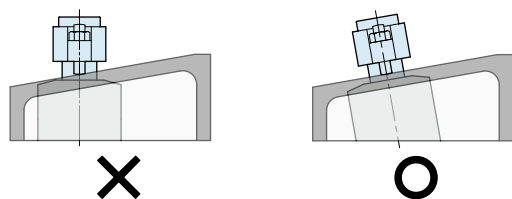


### 5) Installation of the Protection Cover

- If the moving parts of the clamp may endanger operator, please install the protection cover.

### 6) Notes for Lever Design

- Please design a lever as light as possible, and it should be no larger than necessary.  
The clamp may not function depending on mounting position and shape of the lever. If using a large lever in the mounting position as shown below, it may stop in the middle of swing action.  
Please design a lever with :


$$W : \text{Lever Weight (N)} \times S : \text{Distance to the Center of Gravity (m)} \leq 0.035 \text{ (N} \cdot \text{m)}$$

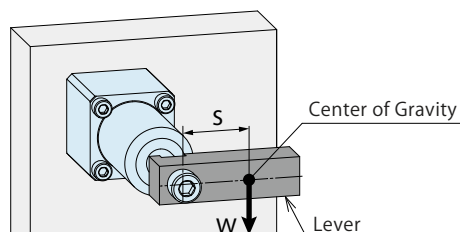

### Installation Notes

- 1) Installation of the Product
  - When installing the product, use 4 hexagonal socket bolts (with tensile strength of 12.9) and tighten them with the torque shown in the list below. Tightening with greater torque than recommended can damage the thread, dent the seating surface or break the bolt.

Model No.	Mounting Bolt Size	Tightening Torque (N·m)
KSS0050	M3×0.5	1.3

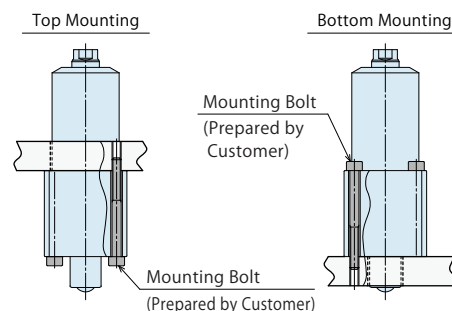

### 2) Installation and Removal of the Swing Lever


- Oil or debris adhered on the tightened parts of the lever and piston rod may cause the lever to loosen. Please clean them thoroughly before installation.
- Tighten the swing lever with the torque shown below.  
Tightening with greater torque than recommended can damage the bolts and lever tightening function.

Model No.	Mounting Bolt Size	Tightening Torque (N·m)
KSS0050	M5×0.8	8

- If the piston rod is subjected to excessive torque or shock, the internal rotation mechanism may be damaged.  
Observe the following points to prevent these kinds of shocks.

#### At Installation

- ① Fix the swing lever with a vise or spanner, etc. and tighten the lever fixing bolt.

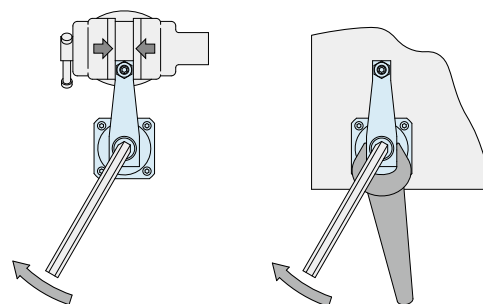

#### At Removal

- ① Fix the swing lever with a vise or spanner, etc. and loosen the lever fixing bolt 2 or 3 turns.

### 3) Checking Looseness and Retightening

- At the beginning of the product installation, the lever fixing bolt may be tightened lightly. Check the looseness and re-tighten as required.

### 4) Adjustment of Swing Speed

- Adjust the speed following "Allowable Swing Time Graph".  
If the clamp operates too fast, the components will be worn out leading to damage.

## ● Cautions

### ● Notes on Handling



- 1) It should be operated by qualified personnel.
  - Machines and devices with hydraulic and pneumatic products should be operated and maintained by qualified personnel.
- 2) Do not operate or remove the product unless the safety protocols are ensured.
  - ① Machines and devices can only be inspected or prepared when it is confirmed that the safety devices are in place.
  - ② Before the product is removed, make sure that the above-mentioned safety devices are in place. Shut off the pressure and power source, and make sure no pressure exists in the air and hydraulic circuits.
  - ③ After stopping the product, do not remove until the temperature drops.
  - ④ Make sure there is no trouble/issue in the bolts and respective parts before restarting a machine or device.
- 3) Do not touch a clamp while it is working.  
Otherwise, your hands may be injured.



- 4) Do not disassemble or modify.
  - If the product is taken apart or modified, the warranty will be voided even within the warranty period.

### ● Maintenance and Inspection

- 1) Removal of the Product and Shut-off of Pressure Source
  - Before the product is removed, make sure that safety devices and preventive devices are in place. Shut off the pressure and power source, and make sure no external force is applied to the product.
  - Make sure there is no trouble/issue in the bolts and respective parts before restarting.
- 2) Regularly clean the area around the piston rod.
  - If it is used when the surface is contaminated with dirt, it may lead to malfunctioning.

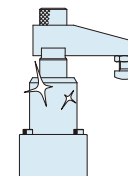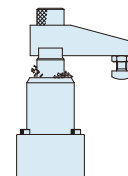


- 3) Regularly tighten mounting bolt to ensure proper use.
- 4) Make sure there is a smooth action without an irregular noise.
  - Especially when it is restarted after left unused for a long period, make sure it can be operated correctly.
- 5) The product should be stored in the cool and dark place without direct sunshine or moisture.
- 6) Please contact us for overhaul and repair.

### ● Warranty


- 1) Warranty Period
  - The product warranty period is 18 months from shipment from our factory or 12 months from initial use, whichever is earlier.
- 2) Warranty Scope
  - If the product is damaged or malfunctions during the warranty period due to faulty design, materials or workmanship, we will replace or repair the defective part at our expense. Defects or failures caused by the following are not covered.
    - ① If the stipulated maintenance and inspection are not carried out.
    - ② Failure caused by the use of the non-confirming state at the user's discretion.
    - ③ If it is used or operated in an inappropriate way by the operator. (Including damage caused by the misconduct of the third party.)
    - ④ If the defect is caused by reasons other than our responsibility.
    - ⑤ If repair or modifications are carried out by anyone other than Kosmek, or without our approval and confirmation, it will void warranty.
    - ⑥ Other caused by natural disasters or calamities not attributable to our company.
    - ⑦ Parts or replacement expenses due to parts consumption and deterioration. (Such as rubber, plastic, seal material and some electric components.)

Damages excluding from direct result of a product defect shall be excluded from the warranty.


model **KSL0050**

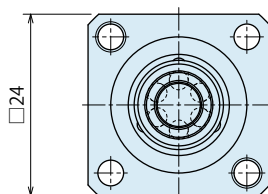

model **KSH0050**



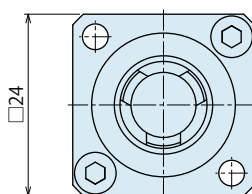


model **KSA0060**

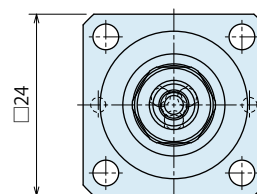

**Exclusive Block**

KSL0050-BD : For Reference Locating  
KSL0050-BC : For One-Direction Locating  
KSL0050-BG : For Guide

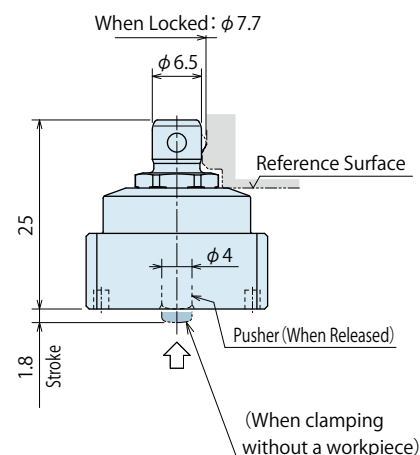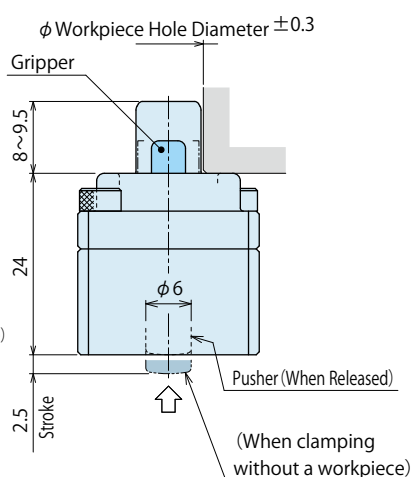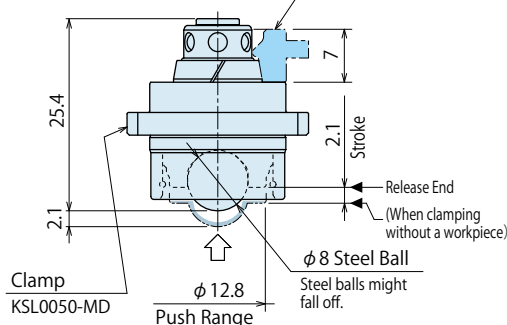


**KOSMEK LTD.**

► <http://www.kosmek.com/>

HEAD OFFICE 1-5, 2-chome, Murotani, Nishi-ku, Kobe-city, Hyogo, Japan 651-2241  
TEL.+81-78-991-5162 FAX.+81-78-991-8787

United States of America SUBSIDIARY	KOSMEK (USA) LTD. 650 Springer Drive, Lombard, IL 60148 USA TEL. +1-630-620-7650 FAX. +1-630-620-9015
MEXICO REPRESENTATIVE OFFICE	KOSMEK USA Mexico Office Av. Santa Fe 103, Int. 59, col. Santa Fe Juriquilla, Queretaro, QRO, 76230, Mexico TEL. +52-1-55-3044-9983
EUROPE SUBSIDIARY	KOSMEK EUROPE GmbH Schleppeplatz 2 9020 Klagenfurt am Wörthersee Austria TEL. +43-463-287587 FAX. +43-463-287587-20
CHINA SUBSIDIARY	KOSMEK (CHINA) LTD. Room601, RIVERSIDE PYRAMID No.55, Lane21, Pusan Rd, Pudong Shanghai 200125, China TEL. +86-21-54253000
INDIA BRANCH OFFICE	KOSMEK LTD. - INDIA 4A/Old No:649, Ground Floor, 4th D cross, MM Layout, Kavalbyrasandra, RT Nagar, Bangalore -560032 India TEL.+91-9880561695
THAILAND REPRESENTATIVE OFFICE	KOSMEK Thailand Representation Office 67 Soi 58, RAMA 9 Rd., Phatthanakan, Suanluang, Bangkok 10250, Thailand TEL. +66-2-300-5132 FAX. +66-2-300-5133



- For Further Information on Unlisted Specifications and Sizes, Please call us.
- Specifications in this Leaflet are Subject to Change without Notice.



JQA-QMA10823  
KOSMEK HEAD OFFICE